Electrolux

CE

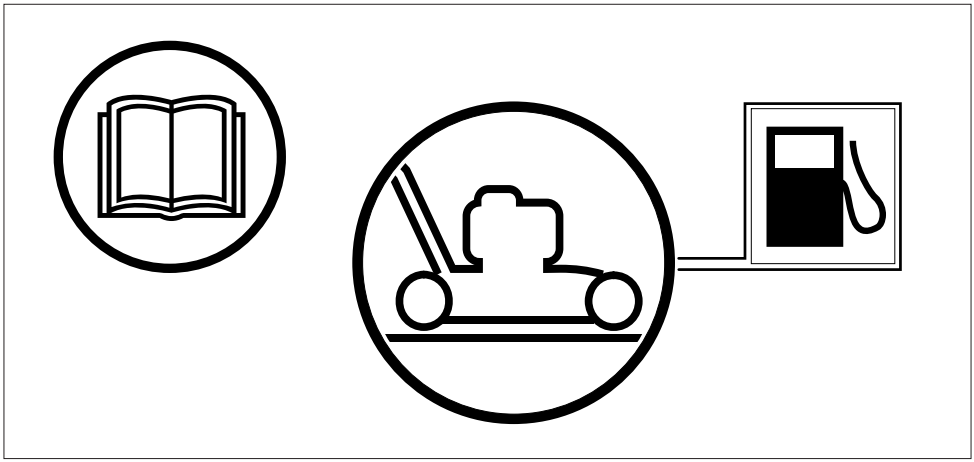

GB **INSTRUCTION MANUAL**
IMPORTANT INFORMATION: Please read these instructions carefully and make sure you understand them before using this unit. Retain these instructions for future reference.

DE **BETRIEBSANWEISUNG** WICHTIGE INFORMATION: Lesen Sie diese Hinweise zur Handha-bung des Geräts aufmerksam durch. Verwenden Sie es erst, wenn Sie sicher sind, daß Sie alle Anweisungen verstanden haben und gut aufbewahren.

FR **MANUEL D'INSTRUCTIONS**
RENSEIGNEMENTS IMPORTANTS: Avant d'utiliser cet appareil, veuillez lire atentivement les instructions et assurez-vous de les avoir comprises. Conservez les instructions pour référence ultérieure.

NL **HANDLEIDING**
BELANGRIJKE IMPORTANTS: Lees deze handleiding aandachtig en zorg dat u ailes begrijpt alvorens de kettingzaag te gebrulken en be-waar ze voor toekomstige raadpleging.

NO **BRUKERHÅNDBOK**
VIKTIG INFORMASJON: Les disse anvisningene nøye og forsikre deg om at du forstår dem før du bruker enheten og oppbevar dem for sen-ere bruk.

FI **OHJEKIRJA**
TÄRKEÄÄ TIETOA: Lue nämä ohjeet huolellisesti ja varmista, että olet ymmärtänyt ne, ennen kuin alat käyttää tätä laitetta ja säilytä myöhempää tarvetta varten.

SE **BRUKSANVISNING**
VIKTIG INFORMATION: Läs instruktionerna noggrant och försäkra dig om att du förstår dem innan du använder utrustningen och spara dem för framtida behov.

DK **BRUGERHÅNDBOG**
VIGTIGE OPLYSNINGER: Læs instruktionerne omhyggeligt, før du bruger enheden og gemme til senere henvisning.

ES **MANUAL DE INSTRUCCIONES**
INFORMACIÓN IMPORTANTE: Lea atentamente las instrucciones y asegúrese de entenderlas antes de utilizar esta aparato. Conserve las instrucciones para la referencia en el futuro.

PT **MANUAL DO OPERADOR**
INFORMAÇÕES IMPORTANTES: Queira ler cuidadosamente estas instruções e tenha certeza de entendê las antes de usar a serra e guarde para consulta futura.

IT **LIBRETTO D'ISTRUZIONI**
INFORMAZIONI IMPORTANTI: Leggere le istruzioni attentamente e capirle bene prima di usare l'utensile. Conservare per ulteriore consultazione.

HU **HASZNÁLATI ÚTMUTATÓ**
Jótállást vállalni csak rendeltetésszerüen használatba vett gépekre tudunk. Kérj ü hogy a gép használatba vétele elött gondosan olvassa el a kezelési utasításokat.

GR **ΕΓΧΕΙΡΙΔΙΟ ΧΕΙΡΙΣΜΟΕ**
ΣΗΜΑΝΤΙΚΕΣ ΠΛΗΡΟΦΟΡΙΕΣ: Διαβάστε προσεχτικά αντές τις οδηγίες χαι Φροντίστε να τις χατανοήσετε αντό το μηχάνημα χαί Φυλάξτε το για να το συμβουλεύεστε στο μέλλον.

CZ **NÁVOD K POUŽÍVÁNÍ**
DÙLEŽITÁ INFORMACE: Než začnete stroj používat přečtěte si prosím velmi pozorně tyto instrukce a ujistěte se, že jste jim porozuměli. Uschovejte si tento návod pro použití i v budoucnu.

SK **PRÍRUČKA**
DÔLEŽITÉ UPOZORNENIE: Než začnete prístroj používať, pozorne si prečítajte túto príručku. Príručku si ponechajte, neskôr ju môžete znovu potrebovať

PL **INSTRUKCJA OBSŁUGI** Gwarancja traci waŋnoúâ w przypadku uŷywania urządzenia do celów innych niŷ wymienione w instrukcji obsługi. Prosimy o uwaŷne przeczytanie instrukcji oraz o stoowanie siæ do zaleceñ i wskazówek w niej zawartych.

RU **РАБОЧИЕ ИНСТРУКЦИИ**
ВАЖНЫЕ СВЕДЕНИЯ: Внимательно прочитать и понять инструкции перед использованием оборудования. Хранить инструкции для дальнейших консультаций.

EE **KASUTUSJUHEND**
TÄHTIS INFORMATSIOON: Lugege kasutusjuhend enne seadme kasutamist kindlasti põhjalikult läbi ning veenduge, et olete kõigest täpselt aru saanud.

LV **ROKASGRĀMATA**
SVARĪGA INFORMĀCIJA: Pirms ierîces izmantoðanas uzmanīgi izlasiet rokasgrâmatu un pârliecinieties, ka jûs labi saprotat tâs saturu. Saglabâjiet rokasgrâmatu, lai nâkotnç bûtu iespçjams atsvaidzināt jûsu zināðanas.

SL **KNJIŽICA Z NAVODILI**
POMEMBNA NAVODILA: Pozorno preberite navodila. Dobro jih morate razumeti, preden začnete uporabljati to orodje.

GB Due to a constant product improvement programme, the factory reserves the right to modify technical details mentioned in this manual without prior notice.
This manual has been prepared for use with different models of lawn mowers having different shapes and equipment..

DE Im Sinne des Fortschritts behält sich der Hersteller das Recht vor, technische Änderungen ohne vorherigen Hinweis durchzuführen.
Diese Bedienungsanleitung wurde für verschiedene Rasenmäher geschrieben.

FR La Maison se réserve la possibilité de changer des caractéristiques et des données de ce manuel à n'importe quel moment et sans préavis.
Ce manuel a été préparé pour usage avec modèle différent de formes de la tondeuse et matériel

NL Door konstante produkt ontwikkeling behoud de fabrikant zich het recht voor om rechnische specificaties zoals vermeld in deze handleiding te veranderen zonder biervan vooraf bericht te geven.
Deze handleiding is samengesteld voor het gebruik van verschillende modellen grasmaaimachines van verschillende afmetingen en met verschillende accessoires

NO Produsenten forbeholder seg all rett og mulighet til å forandre tekniske detaljer i denne manualen uten forhåndsvarsel.
Denne instruksjonsboken er utformet for å dekke flere gressklippere med forskjellig utseende og utstyrr.

FI Jatkuvan tuotteen parannusohjelman tähden valmistaja pidättää oikeuden vaihtaa ilman ennakkovaroitusta tässä ohjekirjasessa mainittuja teknisiä yksityiskohtia.
Tätä opasta on muutettu, jotta sitä voidaan käyttää eri ruohonleikkurimallien kanssa, joiden muodot ja varusteet eroavat toisistaan.

SE Tilverkaren reserverar sig rätten att ändra fakta och uppgifter ur handboken utan förvarning.
Denna bruksanvisning är skriven för olika modeller av elektriska gräsklippare med olika utseende och utrustning.

DK Producenten forbeholder sig ret til ændringer, hvad angår karakteristika og data i nærværende instruktion, når som helst og uden varsel.
Denne Brugsanvisning omhandler flere forskellige modeller af plæneklippere, med forskellige former og udstyr.

ES La firma productora se reserva la posibilidad de cambiar las características y datos del presente manual en cualquier momento y sin previo aviso.
Este manual ha sido hecho para el utilizo de todas las tipologias de cortadora de hierba con características distintas

PT A casa productora se reserva a possibilidade de variar características e dados do presente manual em qualquer momento e sen aviso prévio.
Este manual foi redigido para ser utilizado em diversos modelos de corta relvas com forma e equipamento diferentes

IT La casa produttrice si riserva la possibilità di variare caratteristiche e dati del presente manuale in qualunque momento e senza preavviso.
Questo manuale è stato redatto per essere utilizzato con diversi modelli di rasaerba con forme ed equipaggiamenti differenti.

HU A gyártó cég fenntartja a jogot arra, hogy a használati utasításban megadott adatokon és technikai tulajdonságokon bármikor és elözetes bejelentés nélkül változtasson.
Ez a kézikönyv, azért lett létrehozva, hogy segítségre legyen a különböző formájú és felszerelésű elektromos fűnyíró gépeknél.

GR Λόγω προγράμματος συνεχο´θς βελτίωσης προιόντων, το εργοστάσιο επιφυλάσσεται του δικαιώματος να τροποποιεί τις τεχνικές λεπτομέρειες που αναφέρονται στο εγχειρίδιο αυτό χωρίς προηγούμενη ειδοποίηση.
Το εγχειρίδιο αυτό έχει ετοιμαστεί για μία χρήση σε διαφορετικά μοντέλλα μηχανήι κοπής του γρασιδιού, οι οποίες διαθέτουν διαφορετικό σχήμα και στοιχεία.

CZ Vzhledem k pokračujícím inovacím si vyrobce výhrazuje právo minit technické hodnoty uvedené v této příručce bez predčhozího upožornení.
Obsah této příručky lze použít pro různé typy sekaček na trávu, lišících se tvarem i vybavením.

SK Na základe programu neustáleho zlepšovania produktov si výrobný závod vyhradzuje bez predchádzajúceho upozornenia právo na zmenu technických parametrov uvedených v tejto príručke.
Táto príručka slúži pre rôzne modely kosačiek na trávu rozličných tvarov a s rôznym príslušenstvom.

PL W związku z programem ciągłego ulepszania swoich wyrobów, producent zastrzega sobie prawo do wprowadzania zmian w szczegółach technicznych wymienionych w tej instrukcji bez uprzedniego zawiadomienia. Instrukcja jest częścią wyposażenia
Książeczka ta została opracowana do wykorzystania dla różnych modeli kosiarek do trawy o różnych formach i wyposażeniu.

RU Компания производитель сохраняет за собой право изменять характеристики и данные в настоящем руководстве, в любой момент и без предварительного извещения.
Данное руководство было подготовлено для использования с различными моделями газонокосилок, имеющими разные формы и оборудование.

EE Tootja jätab endale õiguse muuta käesolevas kasutusjuhendis kirjeldatud omadusi ja andmeid suvalisel hetkel ja sellest eelnevalt ette teatamata.
See kasutusjuhend on koostatud kasutamiseks mururiidukite eri mudelitega, millel võib olla erinev kuju ja varustus

LV Izgatavotājs saglabā tiesības jebkurā brīdī un bez brīdinājuma mainīt šajā rokasgrāmatā esošos datus un raksturlīknes.
Instrukcija buvo paruošta įvairių vejapjovės modelių vartojimui, kurios tūri įvairias forma ir įrengimus.

SL Proizvajalec si pridržuje pravico do spremembe karakteristik in podatkov v tem priročniku v katerem koli trenutku brez predhodnega obvestila.
Ta priročnik je namenjen za uporabo različnih modelov motorne kosilnice različnih oblik in opreme

We wish to thank you for choosing our lawn mower. We are confident that the high quality of our machine will meet with your satisfaction and appreciation and that your lawn mower will give you long-lasting service.Before starting to use your machine, make sure to read with care this manual, which has been purposely drawn up to provide you with all the necessary information for proper use, in compliance with basic safety requirements.

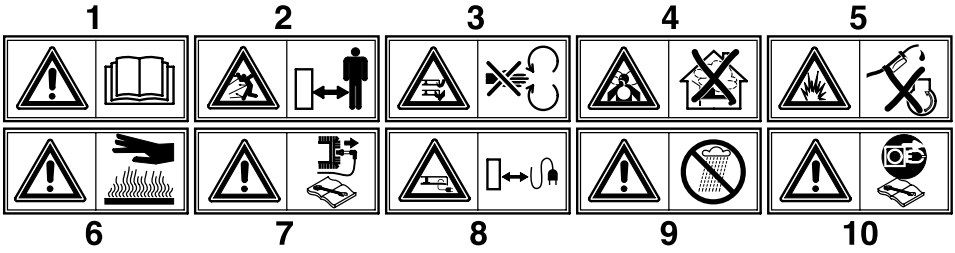

1 ***Caution!*** *Read the instruction manual before use.*

2 *Keep other people well away from the danger area!*

3 ***Warning:*** *Risk of hand and feet injury.*

4 **Risk of breathing in toxic gases!** *Do not use the appliance in closed or poorly ventilated environments.*

5 **Risk of explosion!** *Do not top up with fuel with engine running.*

6 ***Caution!*** *Hot surface*

7 ***Caution!*** *Switch off the engine and disconnect the spark plug before undertaking any maintenance work.*

8 *Keep the power supply cable well away from the cutting tool.*

9 ***Caution!*** *Shelter from rain and humidity.*

10 *Before carrying out any operations on the cutting tool, disconnect the plug*

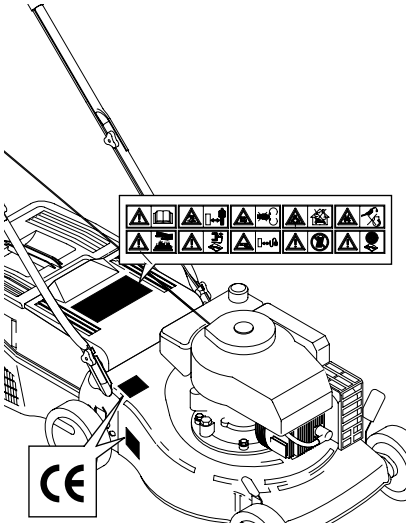

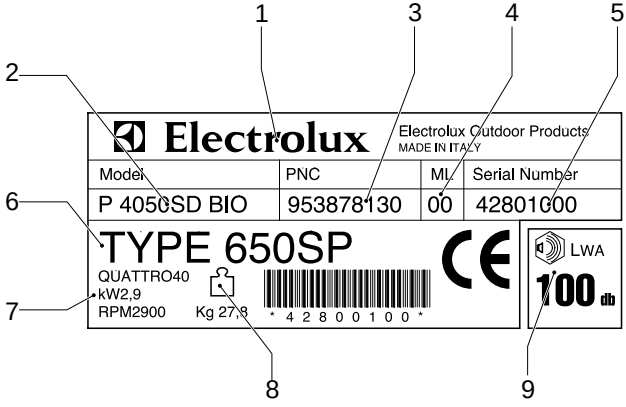

1 Manufacturer
2 Model
3 Product number
4 Maintenance lever
5 Serial number
6 Type
7 Engine info
8 Weight
9 Sound power level

Training

a)Anyone who is not aware of the instructions for use shall not use the lawn mower. Do not allow children or anyone who has not understood these instructions to use the lawn mower. A minimum age for using the machine can be fixed by local regulations.

b)The operator is responsible for the safety of other people in the working area. Keep children and domestic animals at a safe distance when the lawn mower is in use.

c)This machine is to be used exclusively for cutting natural grass. Never use the mower for other purposes (e.g., for flattening out bumps in the ground, such as mole-hills or ant- hills).

d)Work only when there is sufficient light.

e)Before mowing, remove all foreign objects from the lawn which may be thrown by the machine. While mowing, stay alert for any foreign objects which may have been missed.

Setting up and operating the lawn mower

a)When mowing, wear strong footwear (boots or heavy shoes) and long trousers.

b)Before you start mowing, make sure that the blade and blade fixing screw are securely fastened.
If the blade is damaged, it must be replaced.

c)Turn off the engine, wait until the blade has stopped and remove the spark plug cap before:

- transporting, lifting or moving the machine away from the working area;
- carrying out maintenance or cleaning, or when carrying out any operation on the blade;
- adjusting the cutting height;
- eaving the machine unattended.

Caution! The blade starts turning as soon as the engine is started

d)Caution! The fuel is highly inflammable:

- Store fuel in containers specifically designed for this purpose.
- Refuel outdoors only and do not smoke while refuelling.
- Fill up the fuel tank before starting the engine. Under no circumstances open the fuel tank cap or add petrol when the engine is running or when it is still hot.
- If the petrol has overflowed, do not under any circumstances start up the engine.Move the mower away from the area where fuel has bean spilt and avoid any source of possible ignition until the petrol fumes have dissipated.
- Replace the fuel tank cap and tighten it down firmly.

e)Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect..

f) When mowing, never run; you must always walk.

g)Exercise extreme caution when turning or when pulling the lawn mower towards you.

h)Particular precautions must be taken when mowing on slopes or downhill stretches:

- Use appropriate antislip footwear.
- Always be sure of your footing.
- Mow across the face of slopes, never up or down.
- Take great care when changing direction.
- Do not mow on excessively steep slopes.

i)Never use the lawn mower unless the guards and safety devices (e.g. deflector, grass catcher) are securely in position and in good condition.

j)Ensure that the grass catcher and deflector are correctly located. failure to do so may result in foreign objects being ejected by the blade.

k)For reasons of safety, the engine must never exceed the speed. (r.p.m.) indicated on the label.

l) Take care when starting the engine and be sure to follow the user instructions. Never place your hands or feet undern11eath the deck or into the rear discharge chute while the engine is running.

m) Never lift the rear of the mower while starting the engine or during normal operation.

n) If the blade happens to hit any obstacle, stop the engine at once and remove the spark plug cap. Then get an expert to examine the blade.

Maintenance and storage

a)Make sure that all nuts, bolts, and screws are kept well tightened to keep the mower in a safe operating condition.

b)Never leave the machine with fuel in the tank within an enclosed area where the fuel vapours could reach naked flames or sparks.

c)Allow the engine to cool before storing in any enclosure.

d)Keep the engine, silencer, battery compartment and petrol tank free from grass, leaves and excess lubricant, in order to reduce the danger of fire.

e)Frequently check the grass catcher for wear or deterioration

f)For safety reasons, be sure to replace worn-out or damaged parts in due time.

g)If the fuel tank has to be drained, it is essential that this be done outdoor.

h)Assemble the blades following the corresponding instructions and use only blades bearing the maker's name or the trademark of the manufacturer or supplier and marked with the reference number.

i)To protect hands during disassembly or assembly of the blades, it is absolutely essential to wear suitable protective gloves.

VERSION WITH MOTOR TOUCH-N-MOW

j) Unload the Touch-N-Mow system and remove the safety key before making any cleaning or maintenance operation.

k)Make sure that the Touch-N-Mow system is unloaded and the key is in lock position before transporting the machine.

l) In case of failure of the Touch-N-Mow start up system, do not try and repair it but request the intervention of an authorized Assistance Centre.

m) Remove the safety key to avoid any accidental start up.

n) Always remove the safety key when the machine is not used.

o) Always store the key in a safe place available to adults only.

p) Before removing the safety key, make sure that it is in LOCK & REMOVE position.

A DESCRIPTION

1	Upper handles	14	Engine stop lever
2	Lower handles	15	Reduction gear
3	Fastening knobs for upper handles	16	Console
4	Grass catcher	17	Ignition key
5	Oil filler cap	18	Clutch lever
6	Oil drain plug	19	Blade engagement lever
7	Deck	20	Handle advance speed
8	Adjusting levers for cutting height	21	Touch-N-Mow key
9	Spark plug	22	Touch-N-Mow handle
10	Fuel cap	23	Fuel-enrichment pump
11	Engine start-grip	24	Auto throttle
12	Rear deflector	25	Push button
13	Throttle lever		

B ASSEMBLY OF GRASS CATCHER

C ASSEMBLY DEFLECTOR *(if not already assembly)*

Assembly deflector ,only for the models with this equipment (Fig.CVII)

D ASSEMBLY LOWER HANDLES

E ASSEMBLY UPPER HANDLES

F ASSEMBLY WHEEL *(if not already assembly)*

G ADJUSTMENT OF HANDLES *(for the models where it is included only)*

H MULCHING CAP INSERTION *(for the models where it is included only)*

To cut the grass with the mulching system (no grass collection), lift the rear deflector panel and insert the cap by fixing it with the spring as shown in the figure.

I ADJUSTMENT OF CUTTING HEIGHT

J SAFETY PRECAUTIONS

- Always operate with the deflector or grasscatcher in the correct position.
- Always stop the engine before removing the grasscatcher or adjusting the height of cut.
- Never place your hands or feet underneath the deck or into the grass discharge chute while the engine is running.

Before mowing, remove all foreign objects from the lawn which may be thrown by the machine. While mowing, stay alert for any foreign objects which may have been missed.

Never lift the rear of the mower while starting the engine or during normal operation.

Never place your hands or feet underneath the deck or into the rear discharge chute while the engine is running.

K OPERATION

ENGINE ADJUSTMENTS (Fig.KI)

Refer to the engine manufacturer's maintenance manual.

CAUTION:- 0.6l Oil must be added to the engine before use

STARTING THE ENGINE (Fig.KII)

Once the machine has been set up properly, start the engine as follows:

a) Engines with choke system:
when the engine is cold, position the accelerator lever (Fig.KIII - pos.13) on START

b)Operate the engine stop lever (14) to prepare the engine for start, keep lever pressed against handle while starting and using the machine (it operates the engine brake).

c) Engines with primer system:
Press the fuel-enrichment pump (23) located on the carburettor 3 or 4 times position the accelerator lever (13) on MAX.

For further information and explanations, read carefully the user instruction manual of the engine.

d) Start engine.

MANUAL STARTING: (While holding the engine stop lever (14)).

- Hold the engine start-grip (11) and pull the starter rope gently until you feel the resistance caused by compression. Return the starter rope slowly then pull the handle firmly towards you to its full extent.

ELECTRICAL STARTING: (While holding the engine stop lever (14)).

- Insert the plug (G) in the socket (H) on the engine. Turn the ignition key (17) or push the button (25) ,only for the models with this equipment

CAUTION: *The blade starts turning as soon as the engine is started.*

Keep the engine stop lever (14) depressed during machine operation. When the lever is released, the engine stops.

When leaving the machine for any period of time always remove the push button (25).

Remove the push button by turning until the key and keyway line up, and then pull out.

Fit in reverse order

MOWING (Fig.KIII)

To cut the grass, push the lawn mower manually or insert the automatic advance gear.

Before proceeding with the coupling of the automatic feed, choose the speed by means of the change lever (20) (for the models where it is included only).

Change the speed with the clutch disengaged.

There are 3 speed settings.

1°~ 0,6 m/s
2°~ 0,9 m/s
3°~ 1,2m/s

How to insert automatic advance: Lift up the clutch handle (18) and keep it pressed in position.

CAUTION: *Engage the gear only when the engine is running.*

How to disengage advance: Release the clutch handle.

VERSION AUTO THROTTLE (Fig.KIV)

- The Automatic throttle increases the engine speed to maximum when you engage the self drive.
- This is to ensure you have maximum engine speed when you mow but a lower speed and quieter when not mowing. It also provides a soft start to the self drive mode.
- In order to mow in the push mode but at maximum engine speed - then you can fit the override lever which is supplied with the product.
  You should only fit this lever if you wish to override the Automatic
  throttle system and have maximum engine speed when in the push mode and the drive mode.
- Fit the lever to the side of the handle as shown so that when the lever is pushed forward the throttle cable is tightened and the throttle is at maximum.

VERSION WITH BLADE BRAKE (Fig.KV)

With engine running, pull the handle (14) towards the bar and keep depressed. Push the blade engagement lever (19) forward to make the blade rotate.

WARNING! *When the handle (14) is released the blade stops while the motor continues running.*

MOWING

To cut the grass, push the lawn mower manually or insert the automatic advance gear.

Before proceeding with the coupling of the automatic feed, choose the speed by means of the change lever (20) (for the models where it is included only).

Change the speed with the clutch disengaged. There are 3 speed settings.

1°~ 0,6 m/s
2°~ 0,9 m/s
3°~ 1,2m/s

How to insert automatic advance: Lift up the clutch handle (18) and keep it pressed in position.

CAUTION: *Engage the gear only when the engine is running.*

How to disengage advance: Release the clutch handle.

VERSION WITH MOTOR TOUCH-N-MOW (Fig.KVI ÷ KX)

Motor start up

LOADING THE TOUCH-N-MOW SYSTEM

To load the start up system for the first time and whenever the device is disabled, proceed as follows:

1 - Insert the Touch-N-Mow key (21) (provided with the machine)

2 - Rotate the key (21) to “RUN” position

Press the pump (Primer) (23) 3 or 4 times.

1 - Act on the safety lever (14) and keep it pressed against the handgrip.

2 - Push the Touch-N-Mow start up lever forward (22).

Start up the motor by holding the engine start grip (11) and pulling it effortlessly until reaching the resistance caused by compression, release the handle and pull vigorously. If necessary, repeat the operation if the motor does not start.

- Keep the safety lever (14) pressed during operation; if released, the motor will stop.

CUT

To cut the grass, manually push the machine or engage the automatic drive.

To engage the automatic drive, act on the clutch handle (18) and keep it pressed against the handgrip.

Caution:*engage only with operating motor.*

To disengage the automatic drive, release the clutch handle (18).

After the cut, first release the clutch handle (18) then the safety lever (14) and a noise caused by the reloading of the Touch-N-Mow system will be heard.

After switching off, take the Touch-N-Mow key (21) to LOCK & REMOVE position to lock the system.

Remove the key from upwards.

After cutting the grass, always remove the key and store it in a safe place available to the authorized operators only.

Caution: *Without the Touch-N-Mow key in RUN position or with the key in LOCK & REMOVE position, the motor will not start!.*

Start up with Touch-N-Mow

Make sure that no person or object is near the machine and all protection devices are installed and operating.

Remain behind the handgrip in the position required for use.

- Insert the key (21) and rotate it to RUN position.
- Act on the safety lever (14)) and keep it pressed against the handgrip.
- Push the Touch-N-Mow start lever (22) forward and check the motor start up.

Caution: *if the motor does not start, it means that the Touch-N-Mow start up system has been unloaded. If so, proceed to load it as described in the relevant section.*

Important: *Should the motor stop due to lack of gasoline, excessively high grass, or any reason other than the normal stop procedures, the Touch-N-Mow start up system will not reload and it will be necessary to repeat the previously described operations in order to load the system.*

Unloading the Touch-N-Mow system

Prior to any cleaning or transport operation, the start up system shall be unloaded.

For this operation, proceed as follows:

- Disconnect the spark plug cable.
- Act on the safety lever (14)) and keep it pressed against the handgrip.
- Push the Touch-N-Mow lever (22) forward.
- The motor will run but it will not start as the spark plug cable is disconnected.
- Turn the Touch-N-Mow key (21) to LOCK & REMOVE position.
- Remove the key (21).

L AUTOMATIC ADVANCEMENT *(for self-propelled versions only)*

Periodically check the automatic advance assembly and make sure to keep it clean. In particular, the pinion (24) and the gear (25) must be kept perfectly clean.

To carry out this check, you must remove the wheel (26) by unscrewing the screw (27).

M ADJUSTMENT OF CLUTCH CABLE *(for self-propelled versions only)*

Important: *If, when you press the clutch lever, the automatic advance gear does not engage, the clutch cable should be adjusted by inserting the spring (P) in one of the subsequent holes in the plate (R) or in the hole “S” .*

N MAINTENANCE

Caution! *Switch off the motor and disconnect the spark plug before undertaking any maintenance work.*

- For a four stroke engine, check the oil level and change the oil when dirty. For further explanation, see ENGINE INSTRUCTION BOOK.
- Frequently check the mower and ensure that all grass deposits are removed from beneath the deck.
- Never clean the mower by pouring water over it: this may seriously damage the electric start system.
- Take care, the exhaust muffler may be very hot.
- Frequently remove the wheel screws clean whith petroleum and oil before replacing. Ball bearings must be greased before remounting.
- Frequently check the blade for damage.
- The lawn mower must be checked by a SERVICE DEALER.
- Cleaning under the bodywork
  With machine at a standstill and off.
  - Attach fitting (28) on the deck to the water supply tap. Turn on the tap.
  - start up the motor (blade in rotation), allowing it to warm up for a few minutes.
  - at the end of cleaning switch off the motor, turn off the tap, detach the tube from the deck connection.

VERSION WITH TOUCH-N-MOW

- After a garaging period of the machine, it is advisable to lubricate the clutch point shown in fig. NII to facilitate the spring loading procedure.

O BLADE

- To remove the blade (29) unscrew the screw (30).
- Check the conditions of the blade-support (31), the washer (32), the key (33) and the washer (34) and replace any parts which are damaged.
- When reassembling, make sure that the key (33) is correctly seated in the shaft and that the cutting edges face in the direction of the engine rotation. The blade screw (30) must be torqued to 5,34 Kgm (52,4 Nm).

.

VERSION WITH BLADE BRAKE

- To remove the blade (35) unscrew the two screws (36).
- Check the condition of the blade and replace any parts that are damaged, re-assemble using two screws (36) which must be torqued to 5,34 Kgm (52,4Nm).

P KIT ELECTRIC STARTING

- Before starting the motor for the first time, you are advised to keep the battery on charge for 2 to 3 hours.

If the battery proves to be low during starting, charge it for 24 hours.
When starting, don't keep trying to start for more than 5 seconds.

BATTERY MAINTENANCE

IMPORTANT

For correct battery maintenance (37), especially in preparation for a long period of inactivity, and for recharging, it is not necessary to remove it from its casing, but to simply proceed as follows:
1) Remove contact (38).
2) Store the battery in a fresh and dry place.
3) Recharge the battery before use at room temperature for 24-36 hours.
4) Restore the contact (38) before use

BATTERY DISPOSAL

Those batteries marked with a "crossed out waste disposal bin" and bearing the chemical symbol Pb (battery containing lead) are not to be disposed in domestic waste bins.

The user is legally obliged to take the used batteries to special collection points or to return them to the retailer.

GUARANTEE AND GUARANTEE POLICY

If any part is found to be defective due to faulty manufacture within the guarantee period, Electrolux Outdoor Products, through its Authorised Service Repairers will effect the repair or replacement to the customer free of charge providing:

a) The fault is reported directly to the Authorised Repairer.
b) Proof of purchase is provided.
c) The fault is not caused by misuse, neglect or faulty adjustment by the user.
d) The failure has not occurred through fair wear and tear.
e) The machine has not been serviced or repaired, taken apart or tampered with by any person not authorised by Electrolux Outdoor
Products.
f) The machine has not been used for hire.
g) The machine is owned by the original purchaser.
h) The machine has not been used commercially.

● This guarantee is additional to, and in no way diminishes the customers statutory rights.

Failures due to the following are not covered, therefore it is important that you read the instructions contained in this Operator's Manual and understand how to operate and maintain your machine:

Failures not covered by guarantee

- Replacing worn or damaged blades
- Failures as a result of not reporting an initial fault.
- Failures as a result of sudden impact.
- Failures as a result of not using the product in accordance with the instructions and recommendations contained in this Operator's Manual.
- Machines used for hire are not covered by this guarantee.
- The following items listed are considered as wearing parts and their life is dependent on regular maintenance and are, therefore not normally subject to a valid warranty claim: Blades, Electric Mains cable, Belt
- *CAUTION!*
  Electrolux Outdoor Products does not accept liability under the warranty for defects caused in whole or part, directly or indirectly by the fitting of replacement parts or additional parts that are not either manufactured or approved by Electrolux Outdoor Products, or by the machine having been modified in any way.

EC DECLARATION OF CONFORMITY

I, the undersigned Ing.Marcolini Gastone, of Electrolux Outdoor Products Italy Spa, Via Como 72, 23868 Valmadrera (LC). Certify that the Lawnmower:-

Category.....Petrol Wheeled Rotary

Make.....Electrolux Outdoor Products

Conforms to the specifications of Directive 2000/14/EEC

I, the undersigned Ing.Marcolini Gastone, of Electrolux Outdoor Products Italy Spa, Via Como 72, 23868 Valmadrera (LC) Certify that a sample of the above product has been tested using directive 81/1051/EEC as a guide. The maximum A-weighted sound pressure level recorded at operator position under free field
semi anechoic chamber conditions was :-

I, the undersigned Ing.Marcolini Gastone, of Electrolux Outdoor Products Italy Spa, Via Como 72, 23868 Valmadrera (LC) Certify that a sample of the above product has been tested using ISO 5349 as a guide. The maximum weighted root mean square value of vibration recorded at operator's hand position was:-

Type of Cutting Device.....Rotary Blade

Identification of Series. .....See Product Rating Label

Conformity Assesment Procedure.....ANNEX VI

Notified Body .....NEMKO Spa

Other Directives:-.....98/37/EEC, 89/336/EEC

& applicable standards:- ..... EN836:1997, EN ISO14982:1998

Type.....*A*
Version..... .....*B*
Width of cut ....*C*
Guaranteed sound power level.....*D*
Measured sound power level.....*E*
Sound pressure livel at the ear.....*F*
Vibration of the handle.....*G*

Technical Manager

Electrolux Outdoor Product Italy spa
Via Como 72 - 23868 Valmadrera (LC)

A

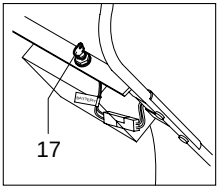
17

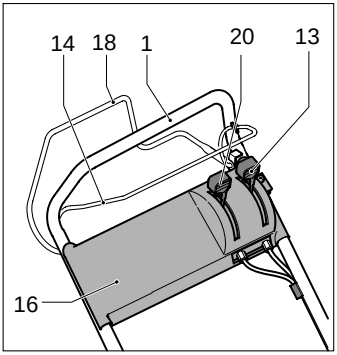
14
18
1
20
13
16

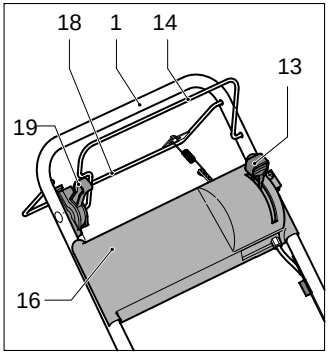
18
1
14
13
19
16

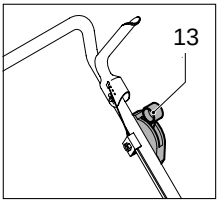
13

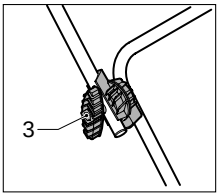
3

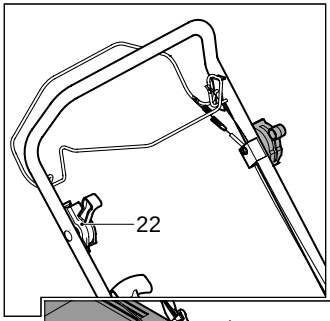
22

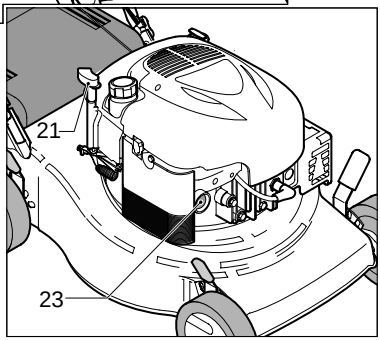
21
23

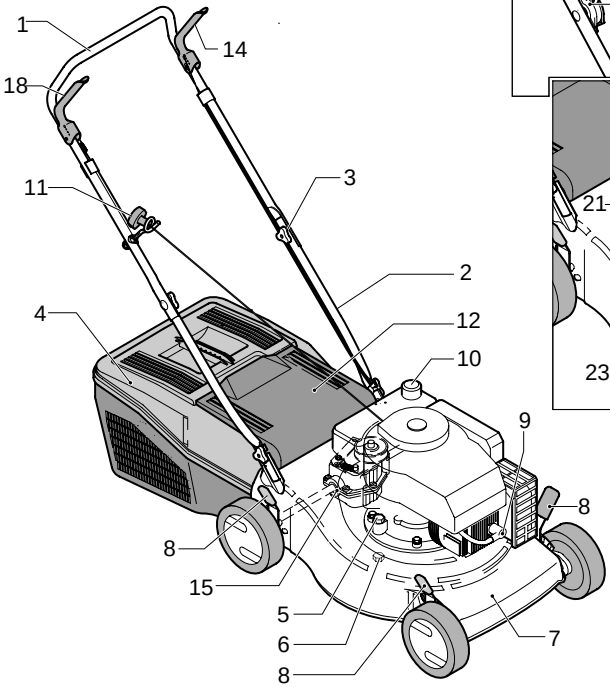
1
14
18
3
11
2
4
12
10
9
8
8
15
5
6
8
7

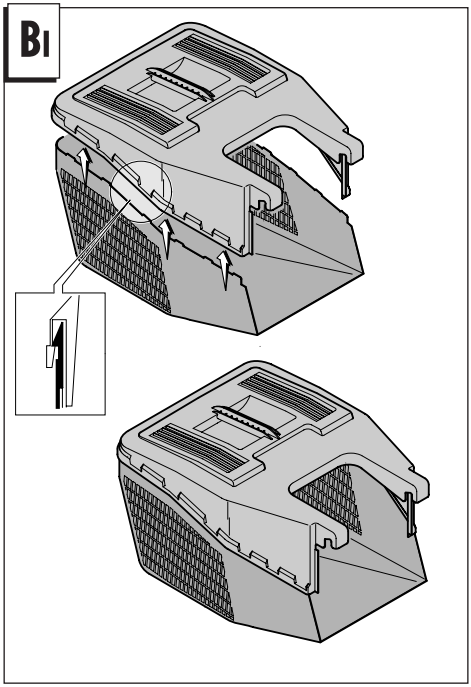
BI

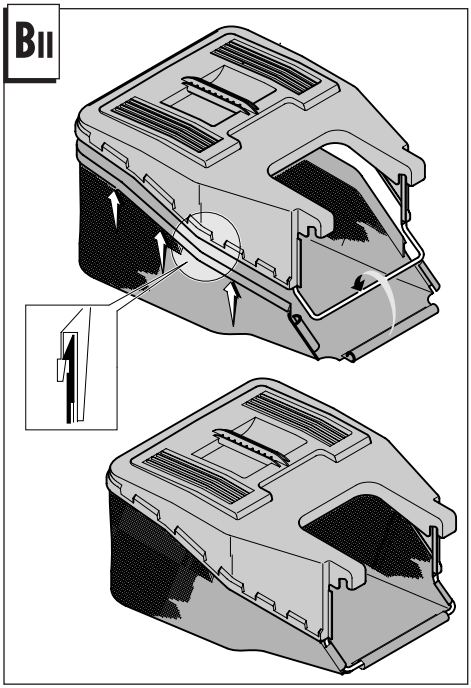
BII

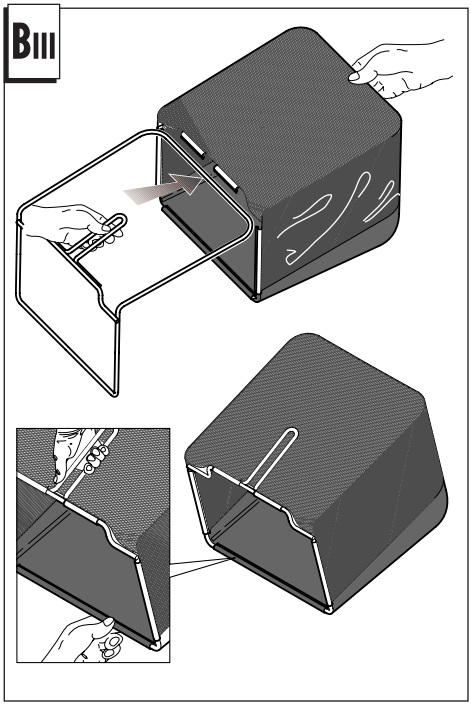
BIII

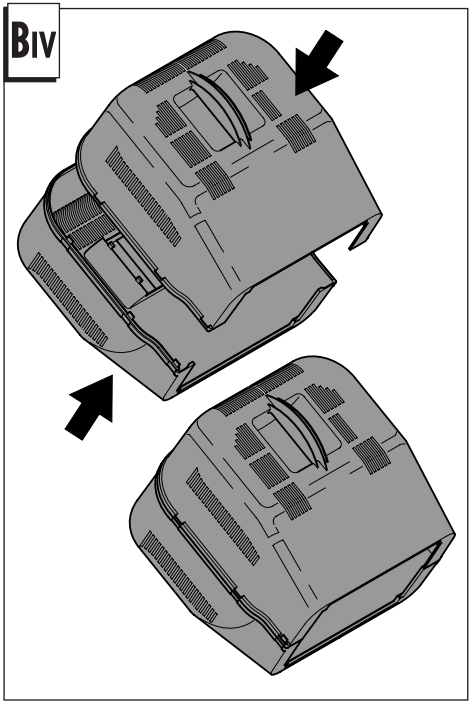
BIV

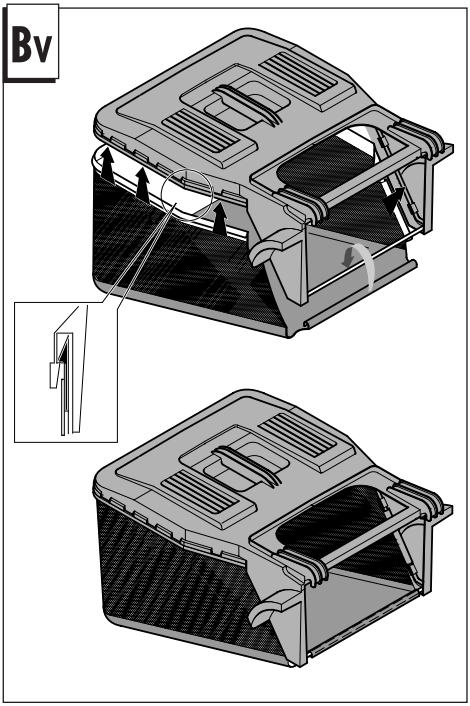
Bv

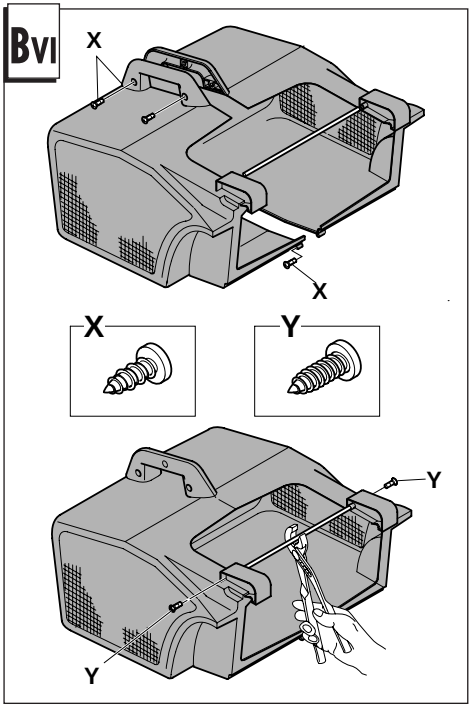
Bvi
X
X
X
Y
Y
Y

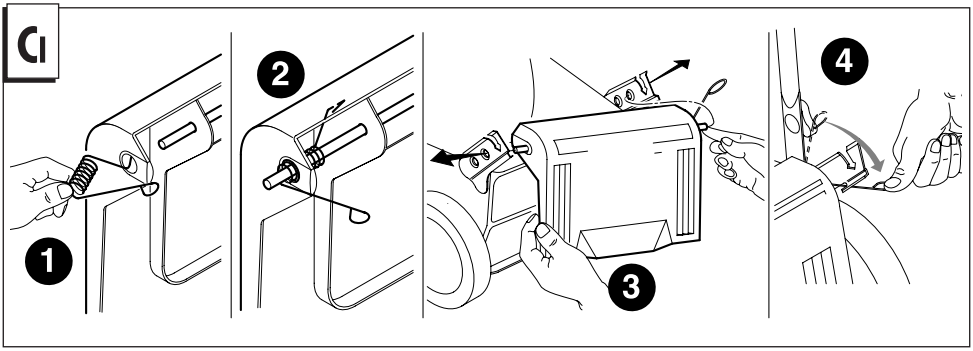
Ci
1
2
3
4

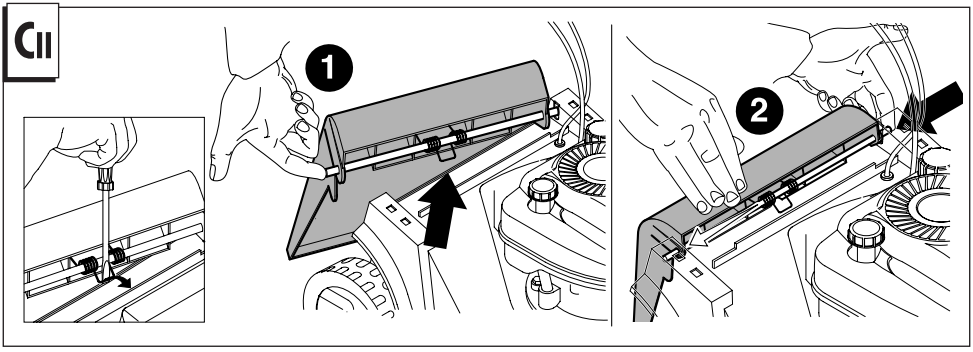
Cii
1
2

CIII

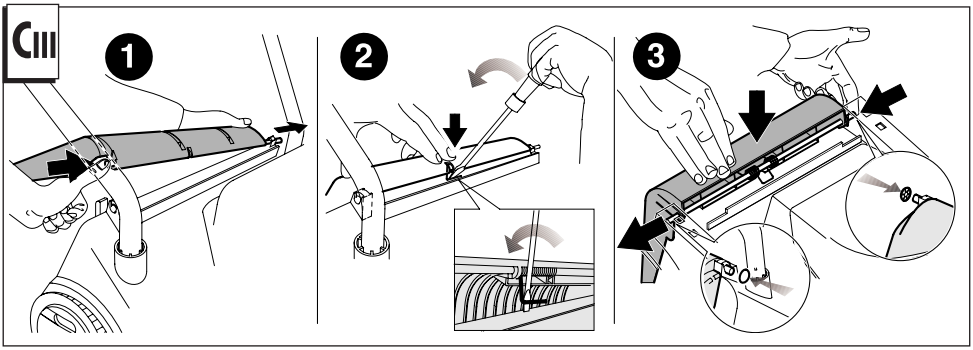

CIV

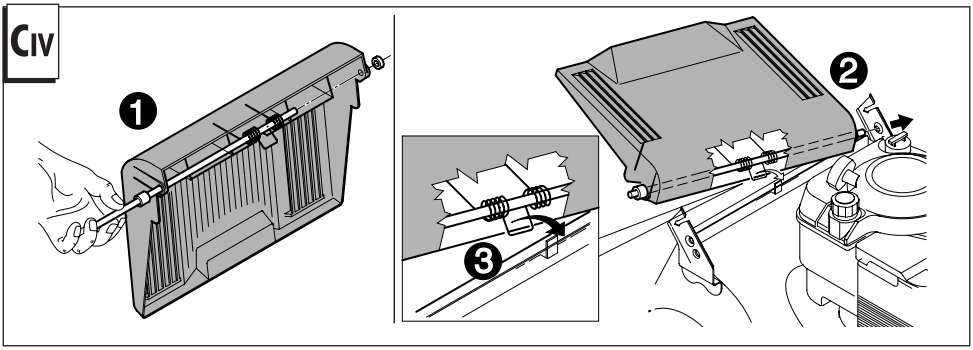

CV

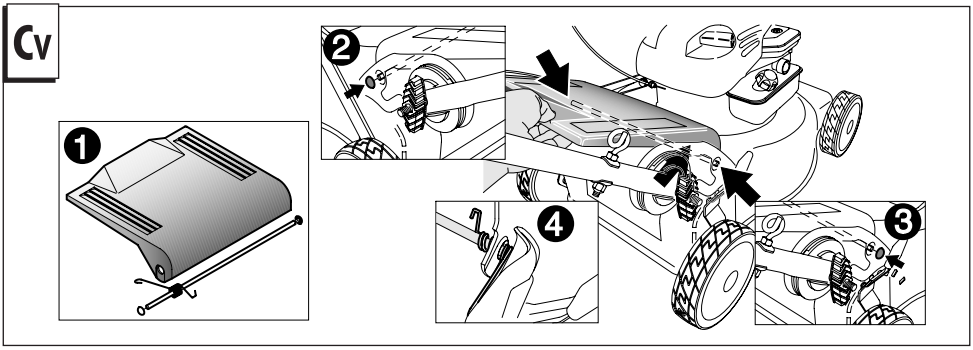

CVI

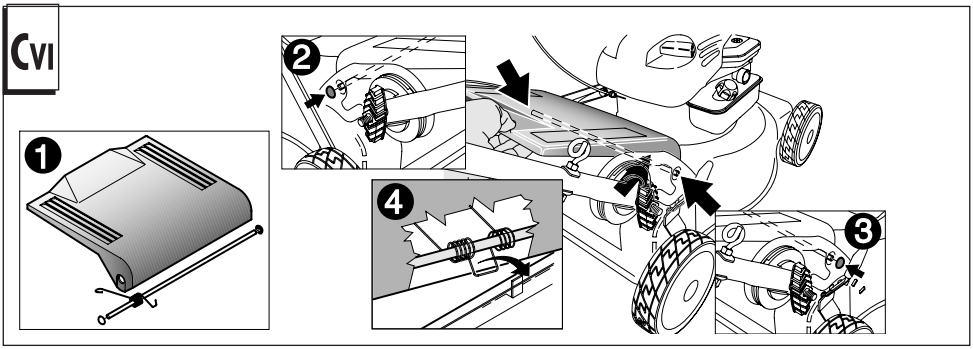

CVII

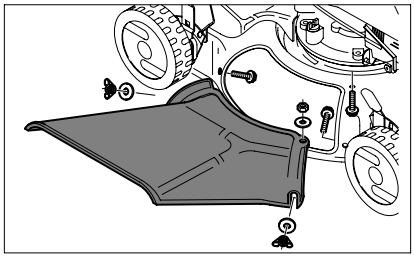

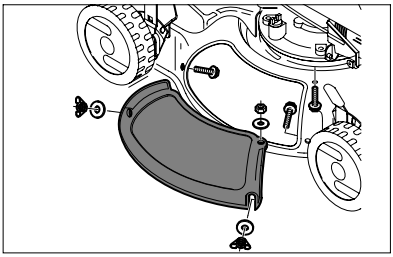

DI

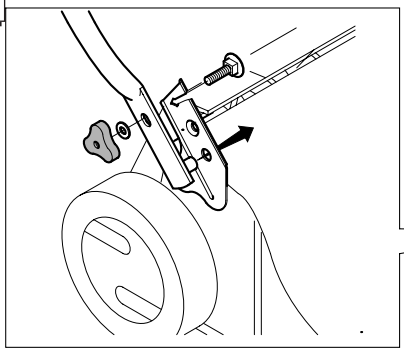

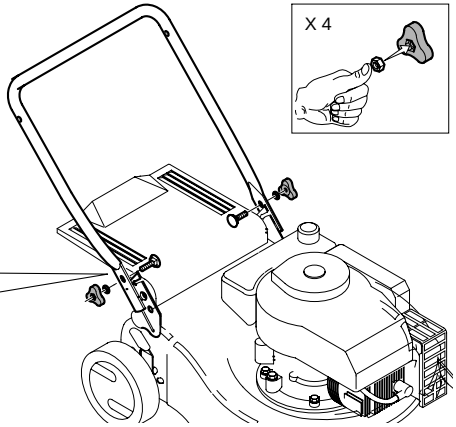

DII

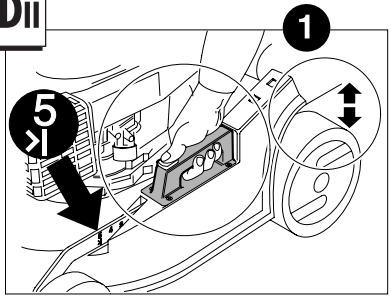

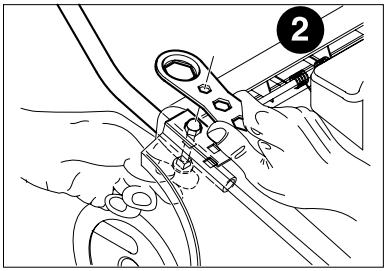

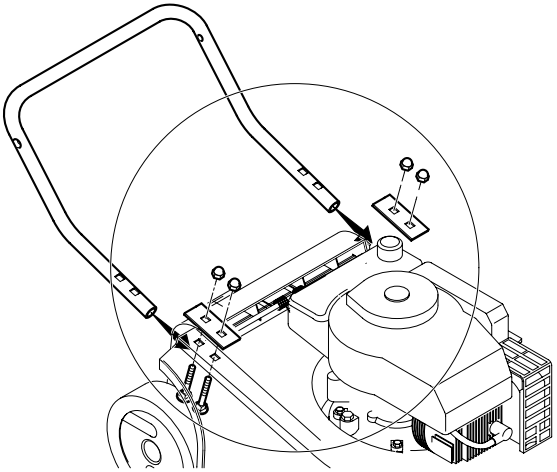

DIII

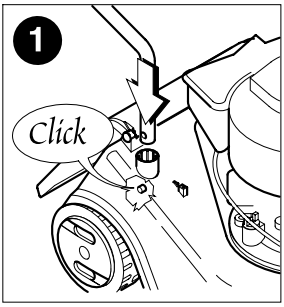

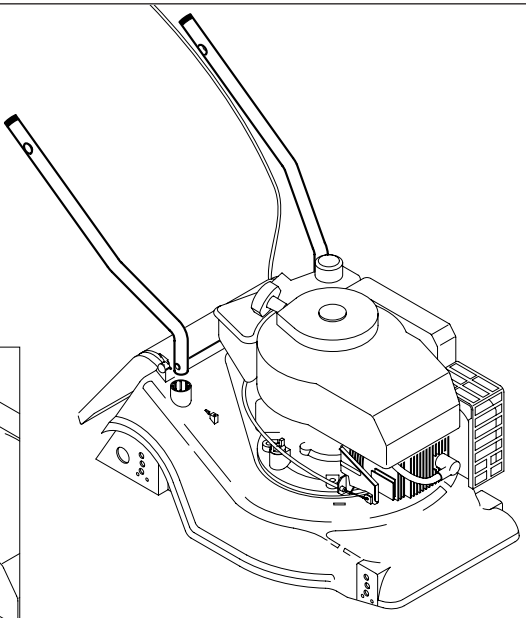

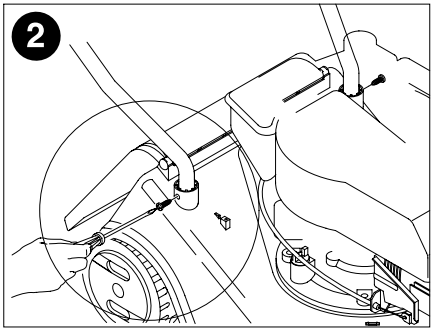

DIV

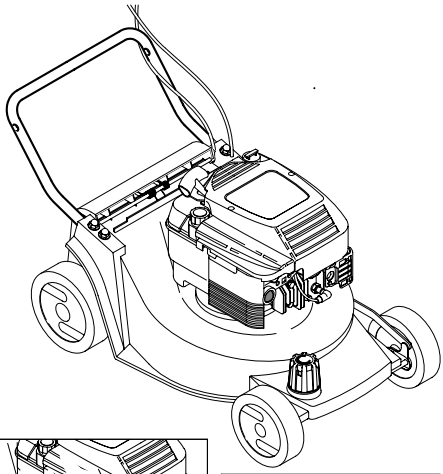

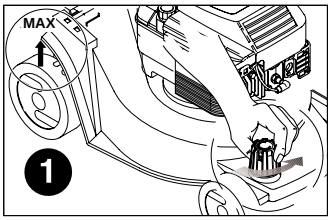

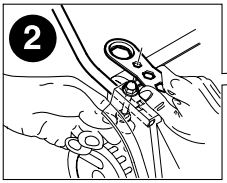

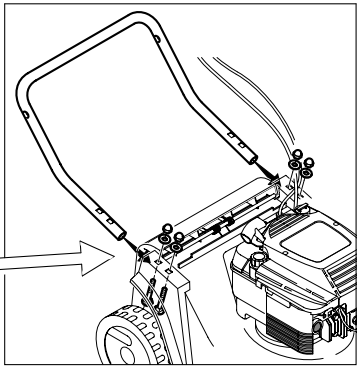

Dv

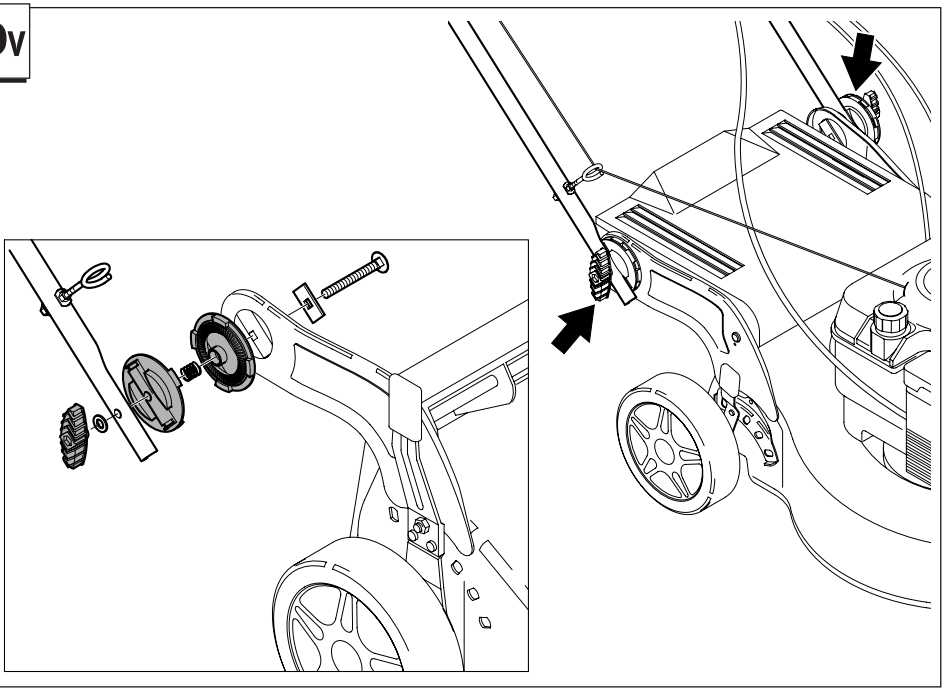

Ei

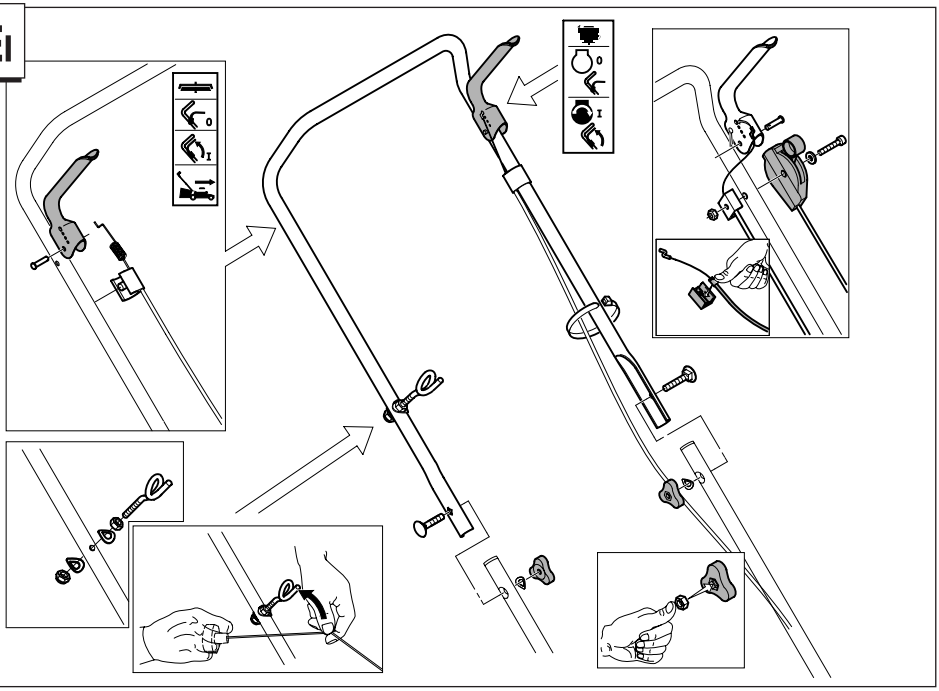

E11

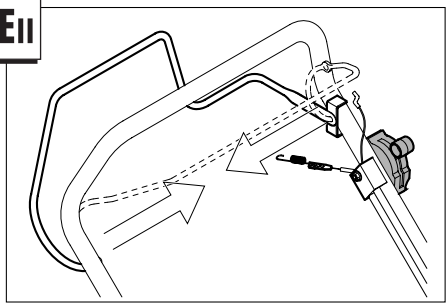



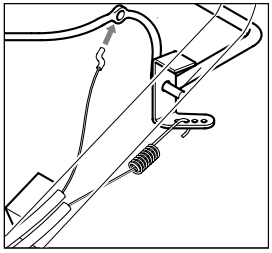

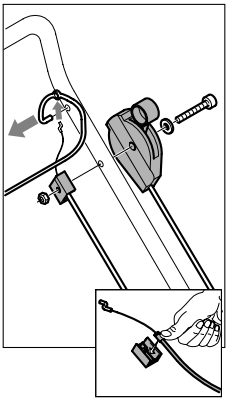

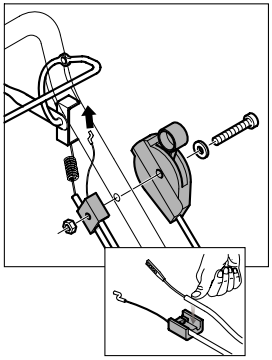

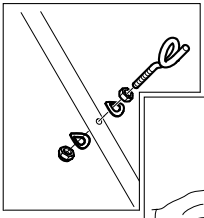

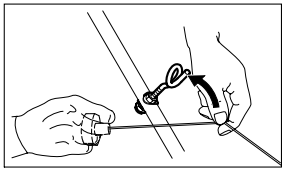

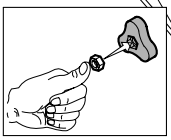

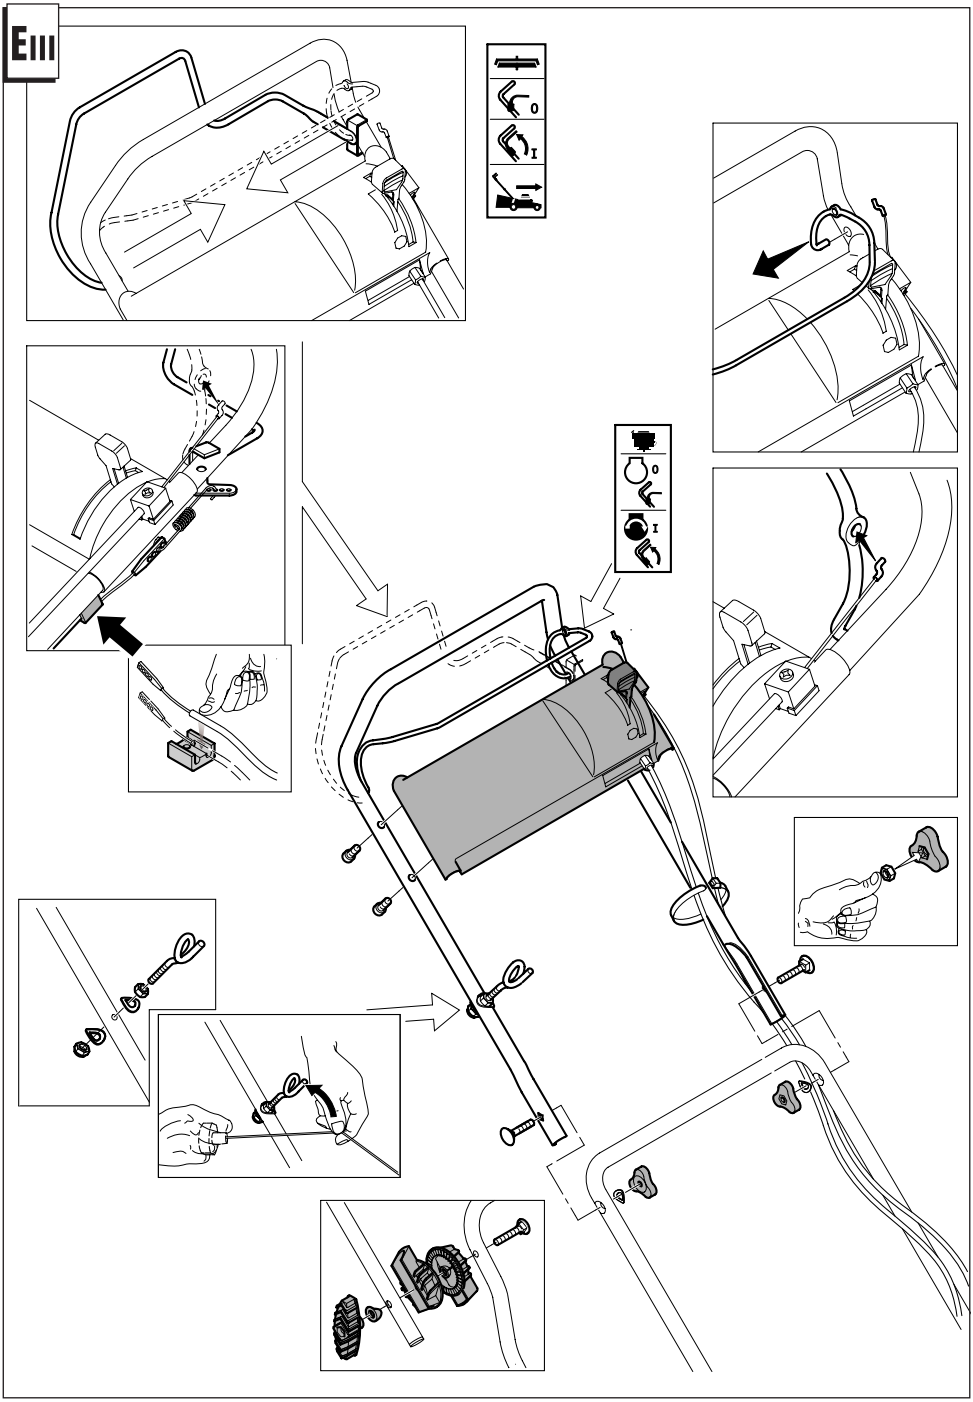
E III
0
I
0
I

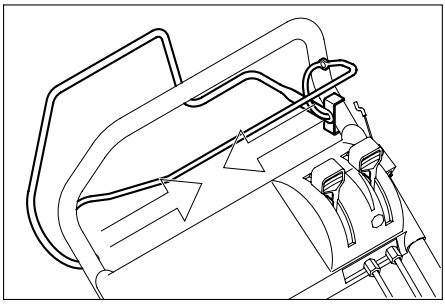

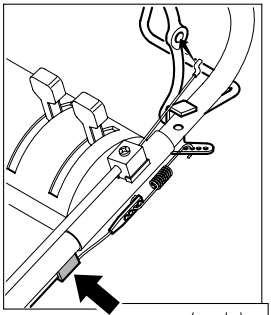





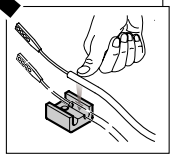

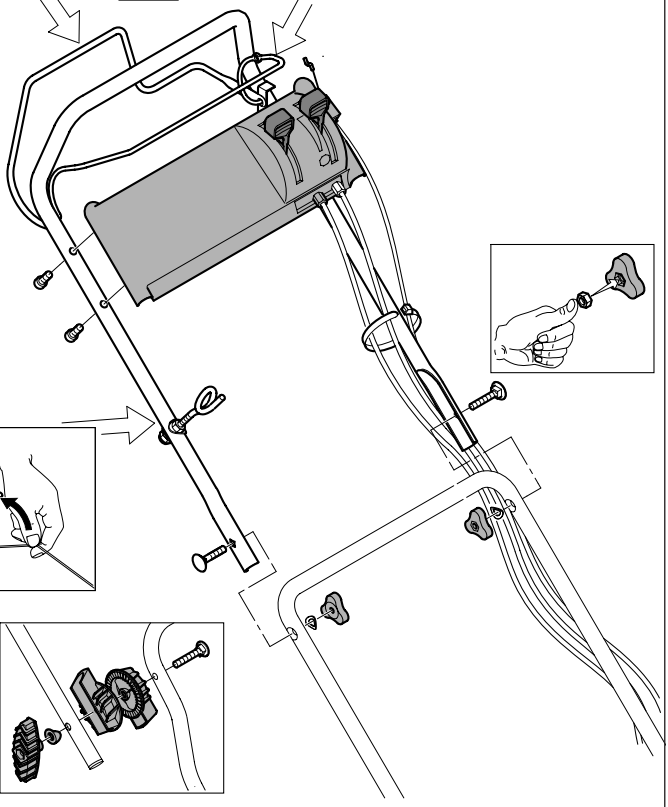

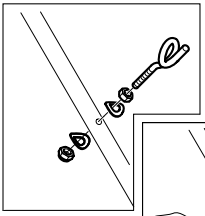

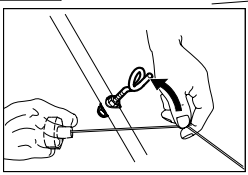

Ev

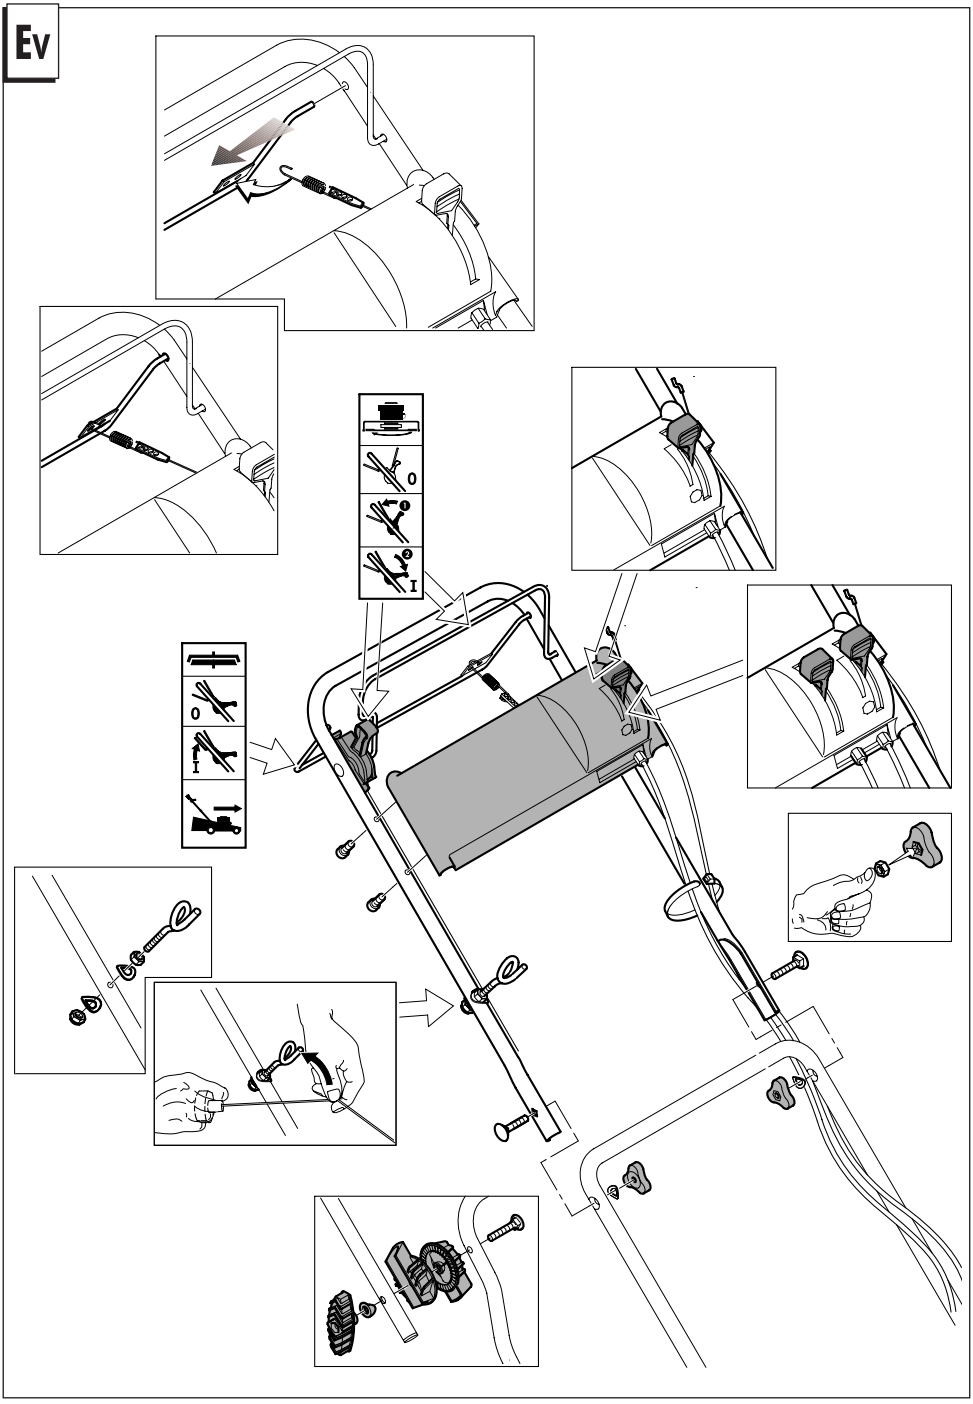

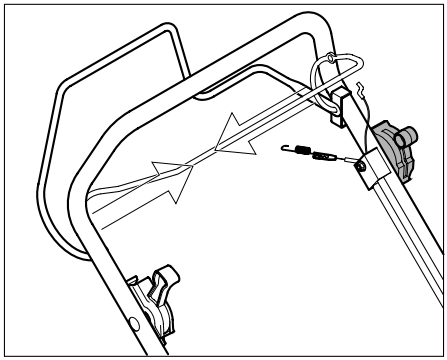

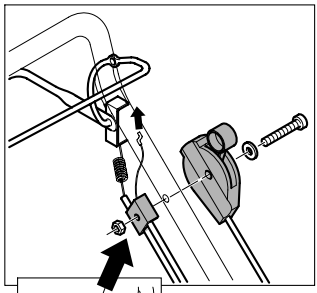

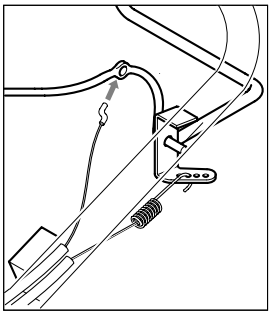

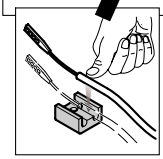

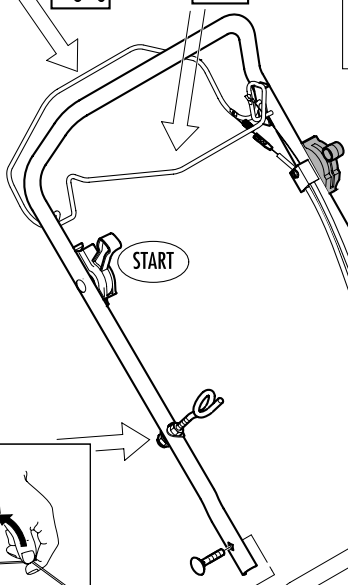
START

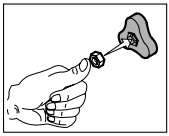

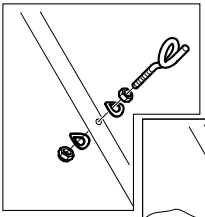

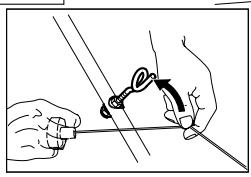

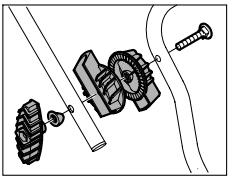

F

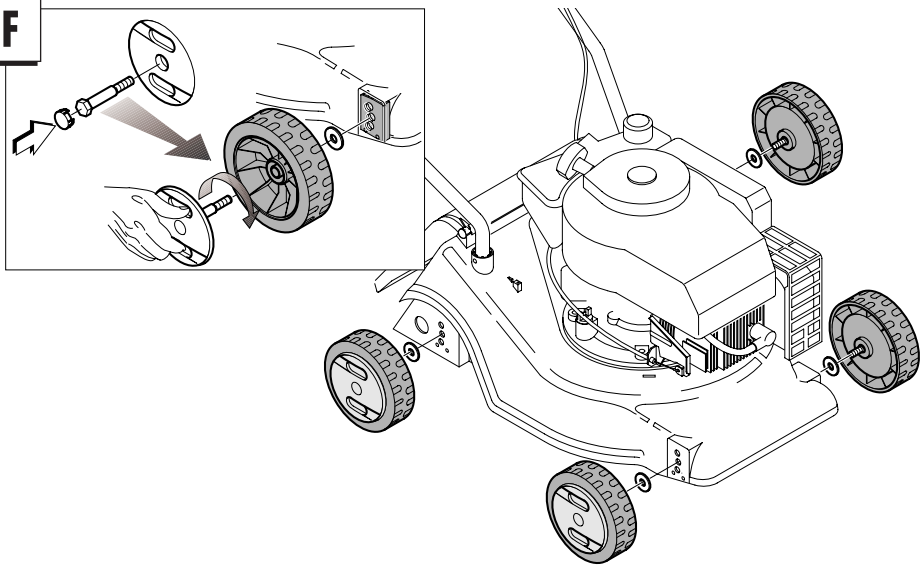

G

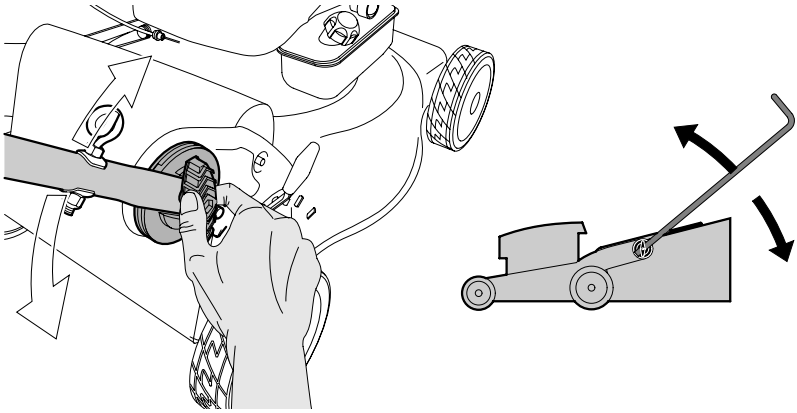

H

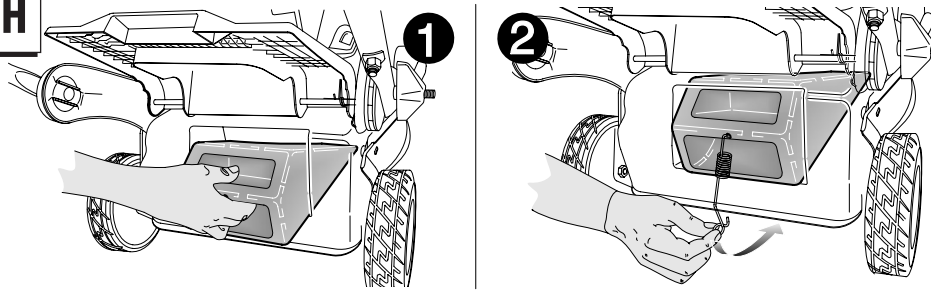

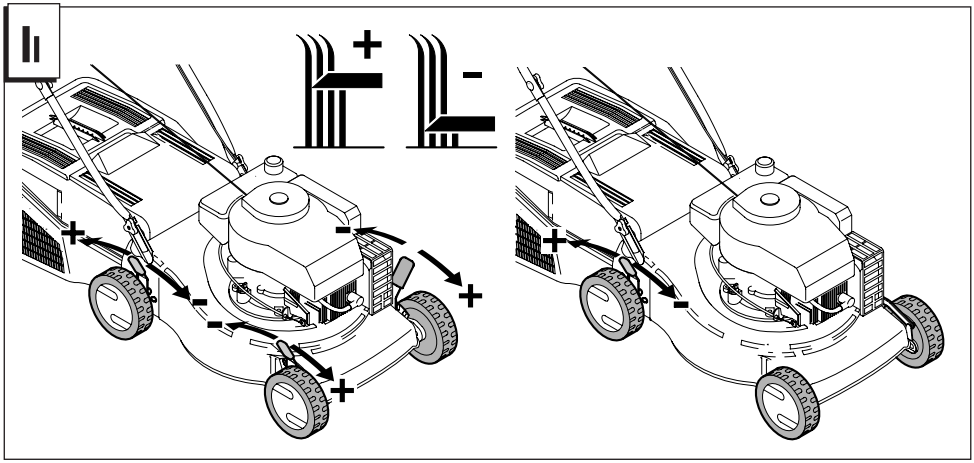

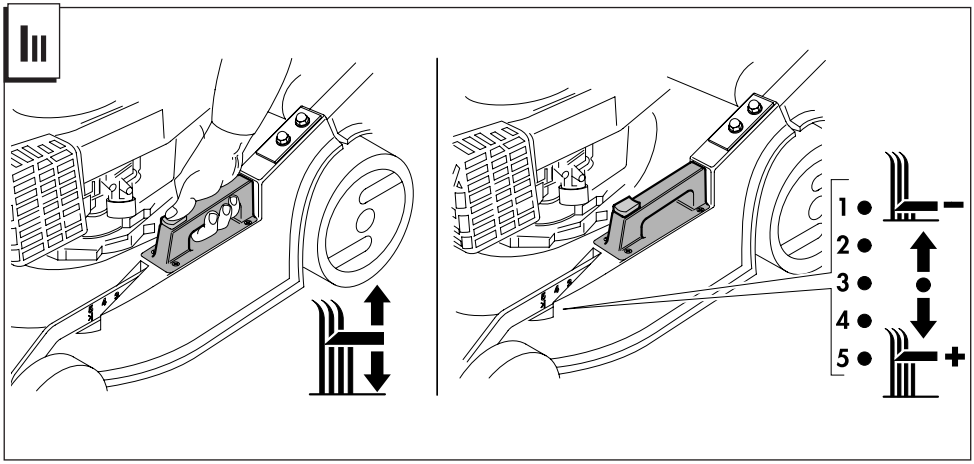
1
2
3
4
5

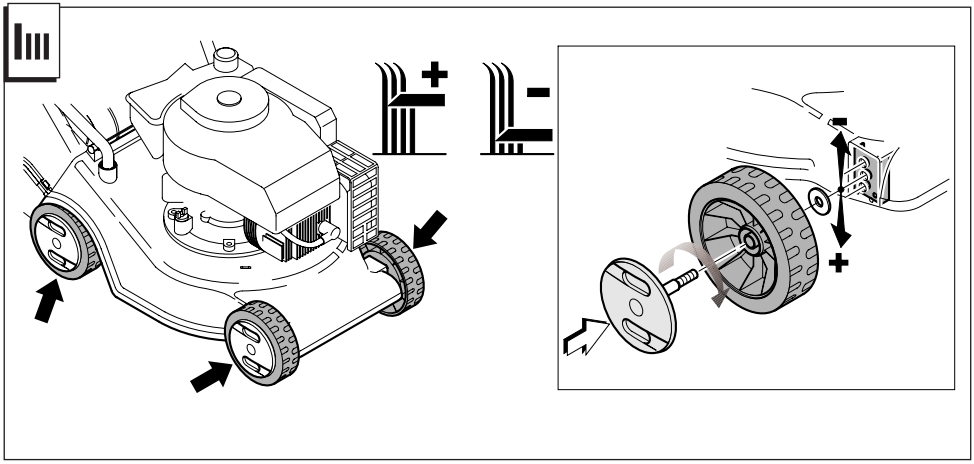

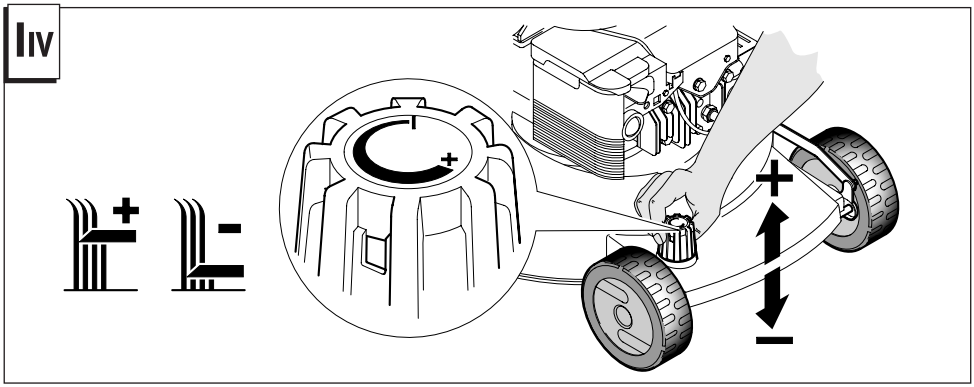
IIV

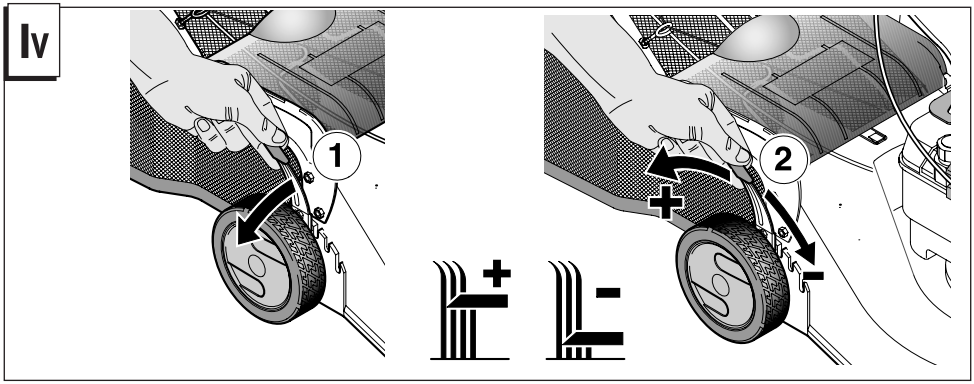
IV
1
2

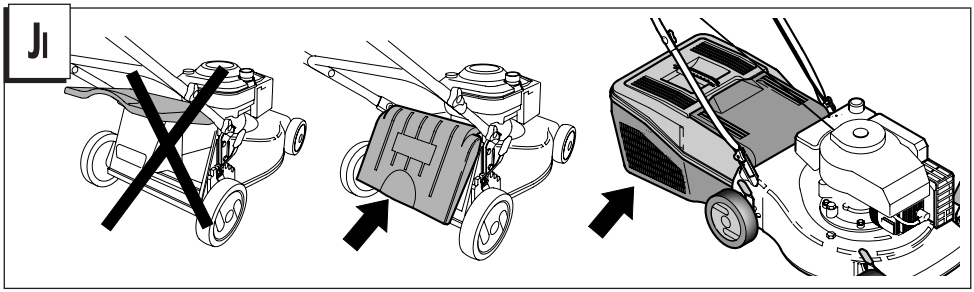
JI

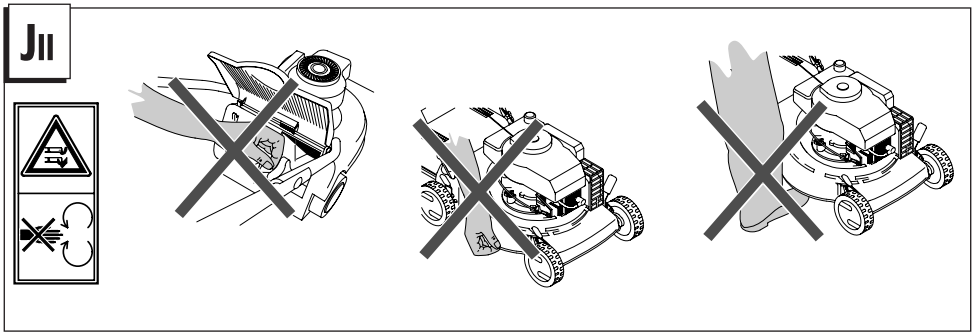
JII

JIII

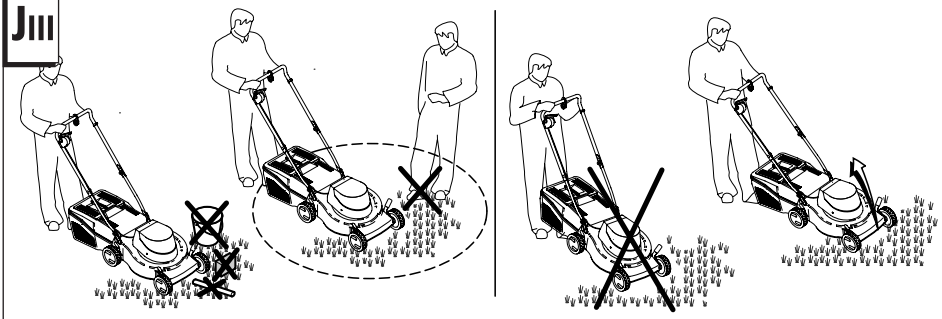

KI

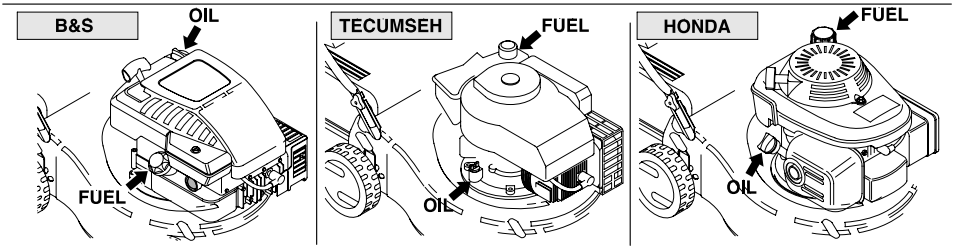
B&S
OIL
FUEL
TECUMSEH
FUEL
OIL
HONDA
FUEL
OIL

KII

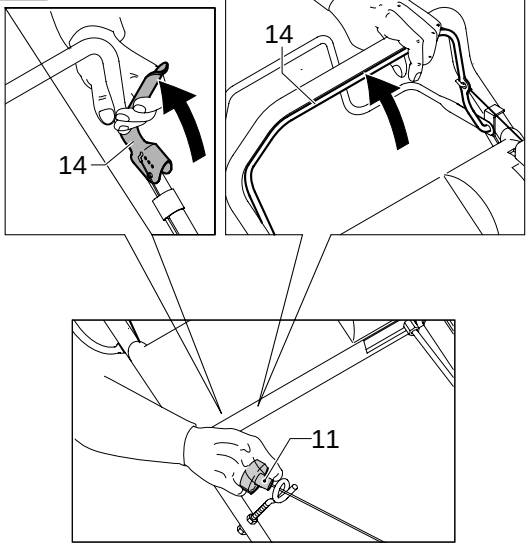
14
14
11

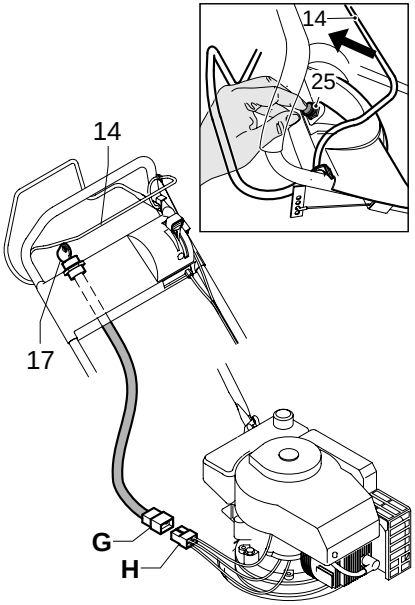
14
25
14
17
G
H

KIII

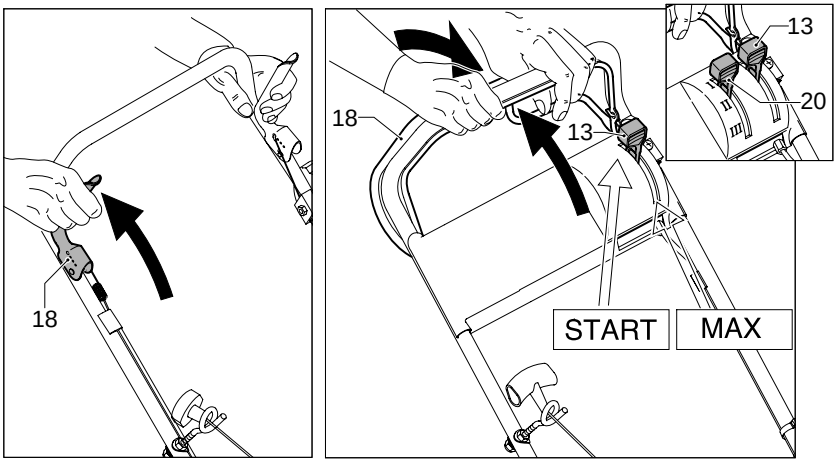

KIV

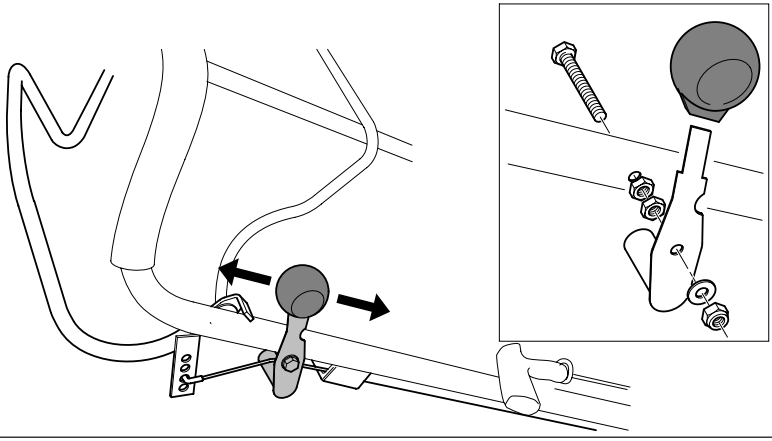

KV

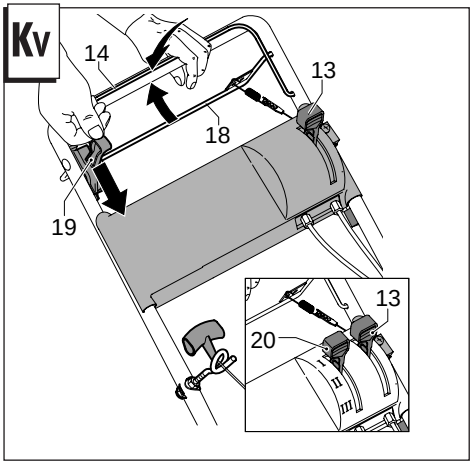

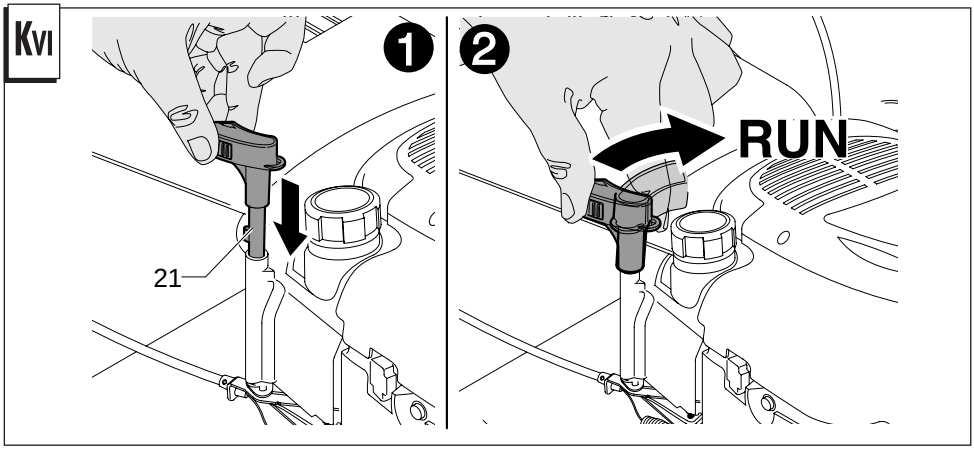
KVI
1
2
RUN
21

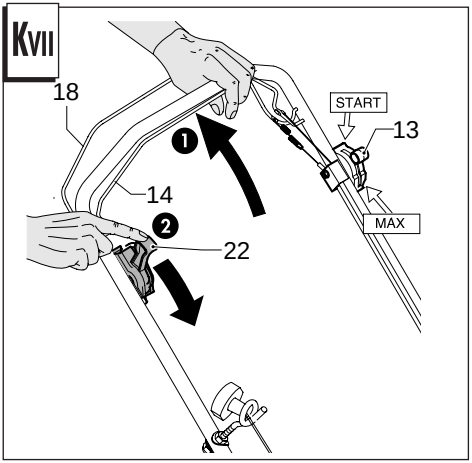
KVII
18
START
13
1
14
2
22
MAX

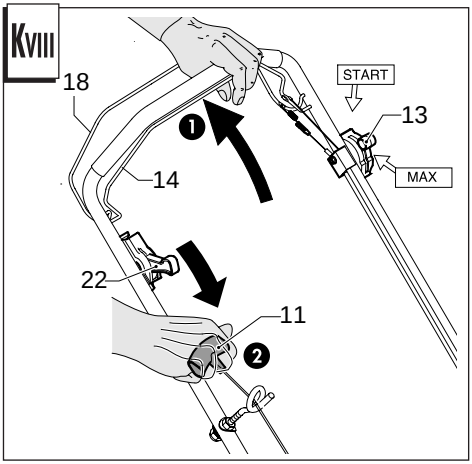
KVIII
18
START
13
1
14
MAX
22
11
2

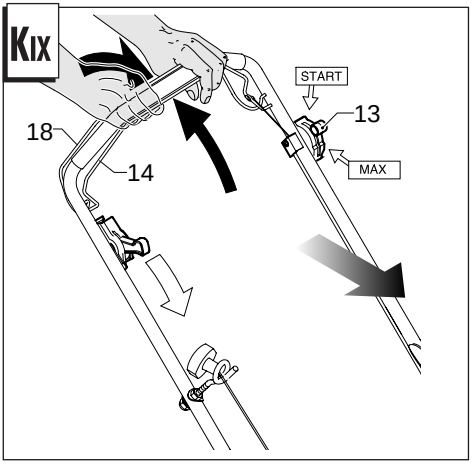
KIX
START
13
18
14
MAX

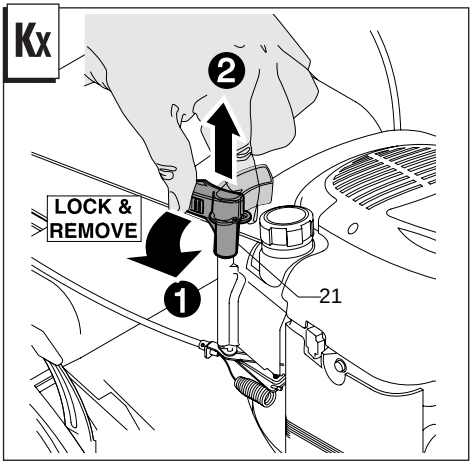
KX
2
LOCK &
REMOVE
1
21

L

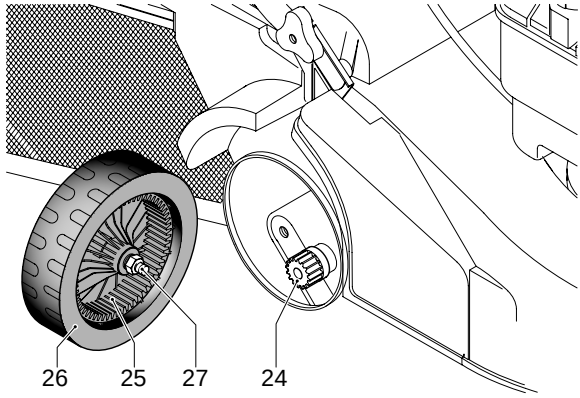

M

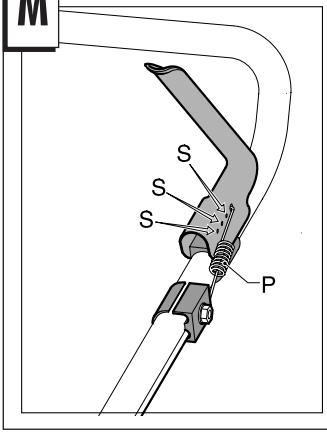

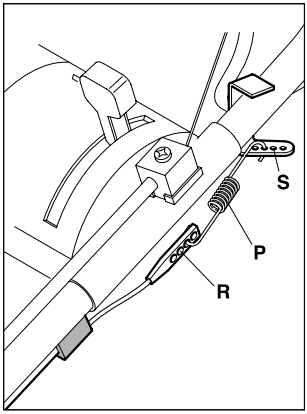

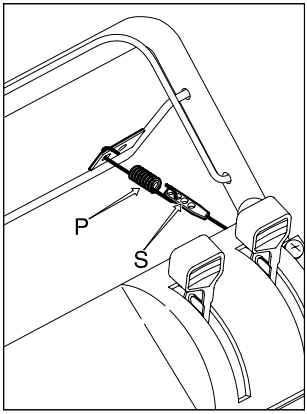

NI

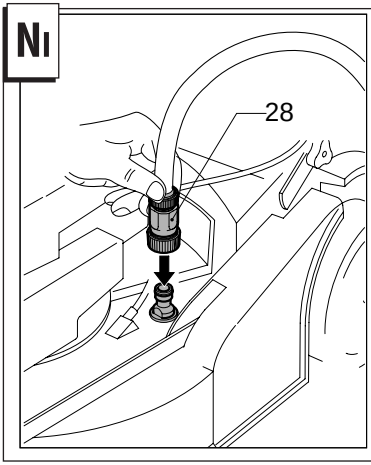

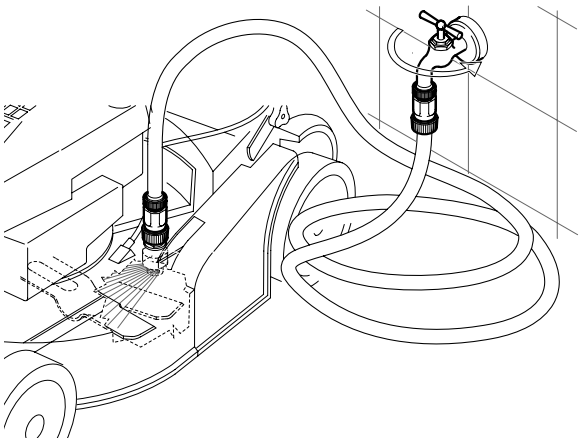

NII

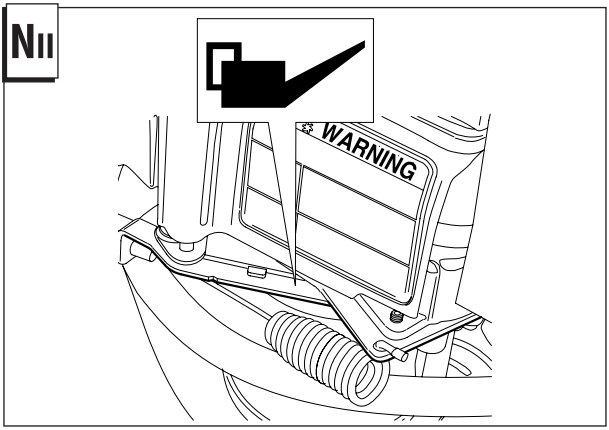

OI

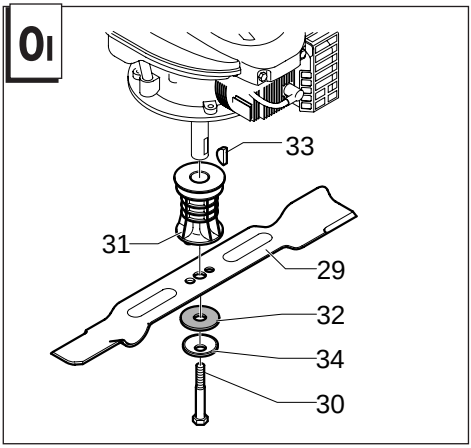

OII

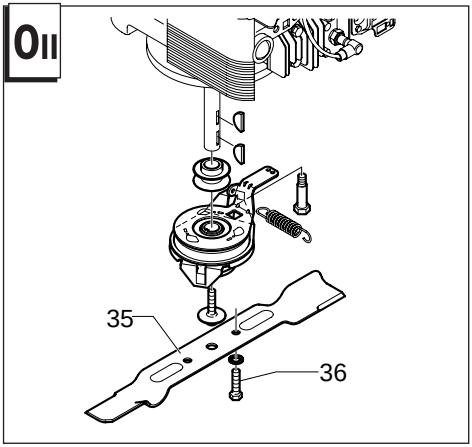

P

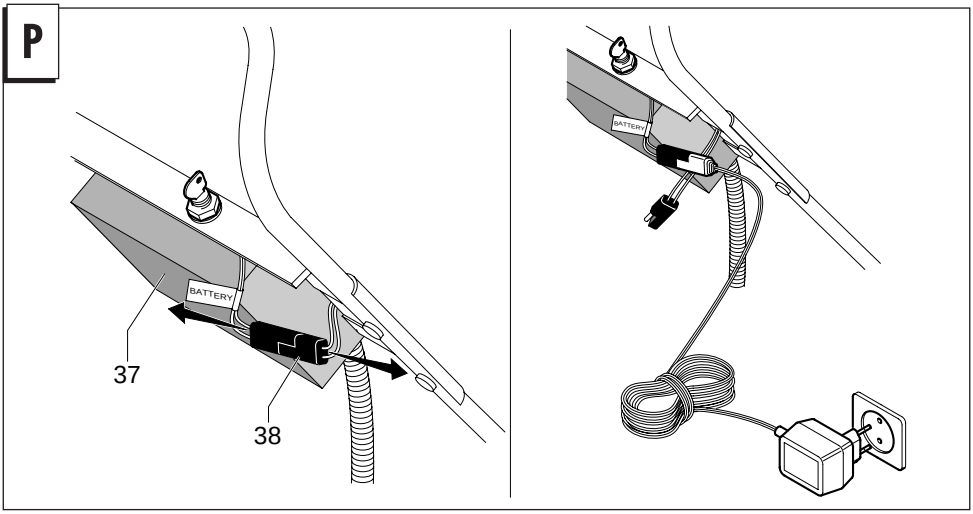

A	400
B	CV-CC-CT
C	40 cm
D	96 dB (A)
E	95 dB (A)
F	81 dB (A)
G	5 m/s^2

A	460
B	CV-CC-SP-SC-SL-CL-SK
C	46 cm
D	96 dB (A)
E	95 dB (A)
F	84 dB (A)
G	5 m/s^2

A	500
B	CV-SV-SK-KM-MS-ST-MT
C	46 cm
D	96 dB (A)
E	95 dB (A)
F	84 dB (A)
G	5 m/s^2

A	540
B	CV-SP
C	40 cm
D	96 dB (A)
E	95 dB (A)
F	81 dB (A)
G	5 m/s^2

A	546
B	CV-CC-CA-CT-SP-SN-SC-CL-SL-SK-ST-SX-KC-KM-MC-MK-ML-MT
C	46 cm
D	96 dB (A)
E	95 dB (A)
F	84 dB (A)
G	5 m/s^2

A	548
B	CV-SB-SV-SK
C	47 cm
D	100 dB (A)
E	98 dB (A)
F	84 dB (A)
G	5 m/s^2

A	550
B	3B-3H-3K-3M-3V-SB-SK-SN-ST-SV-HM-KM-MK-MS-MT
C	53 cm
D	100 dB (A)
E	98 dB (A)
F	84 dB (A)
G	5 m/s^2

A	553
B	SV-3V-3B-3K-MS-3H-3W-HM-ST-MS-MT-ML
C	53 cm
D	100 dB (A)
E	98 dB (A)
F	84 dB (A)
G	5 m/s^2

A	650
B	CE-CF-CV-CC-SP-SC-CL-SL
C	50,2 cm
D	100 dB (A)
E	98 dB (A)
F	84 dB (A)
G	5 m/s^2

A	653
B	CL-CV-CC-ML-SC-SN-SK-SL-SP-ST-SX-KC-MC-MS-MT-KM-ML
C	53 cm
D	100 dB (A)
E	98 dB (A)
F	87 dB (A)
G	5 m/s^2

A	940
B	CV-CC-CT-EV-EC
C	40 cm
D	96 dB (A)
E	95 dB (A)
F	81 dB (A)
G	5 m/s^2

A	946
B	CV-CC-CA-CT-SP-SN-SC-CL-SL-SK-ST-SX-KC-KM-MC-MK-ML-MT
C	46 cm
D	96 dB (A)
E	95 dB (A)
F	84 dB (A)
G	5 m/s^2

A	651
B	CV-CC-CA-CT-SP-SN-SC-CL-SL-SK-ST-SX-KC-KM-MC-MK-ML-MT
C	51 cm
D	100 dB (A)
E	98 dB (A)
F	84 dB (A)
G	5 m/s^2

A	951
B	CV-CC-CA-CT-SP-SN-SC-CL-SL-SK-ST-SX-KC-KM-MC-MK-ML-MT
C	51 cm
D	100 dB (A)
E	98 dB (A)
F	84 dB (A)
G	5 m/s^2

A	530
B	3B-3H-3K-3M-3V-SB-SK-SN-ST-SV-HM-KM-MK-MS-MT
C	51 cm
D	100 dB (A)
E	98 dB (A)
F	84 dB (A)
G	5 m/s^2

A	730
B	3B-3H-3K-3M-3V-SB-SK-SN-ST-SV-HM-KM-MK-MS-MT
C	51 cm
D	100 dB (A)
E	98 dB (A)
F	84 dB (A)
G	5 m/s^2

A	930
B	3B-3H-3K-3M-3V-SB-SK-SN-ST-SV-HM-KM-MK-MS-MT
C	51 cm
D	100 dB (A)
E	98 dB (A)
F	84 dB (A)
G	5 m/s^2

A	640
B	CV-CC-CT
C	40 cm
D	96 dB (A)
E	95 dB (A)
F	81 dB (A)
G	5 m/s^2

A	646
B	CV-CC-SP-SC-SL-CL-SK
C	46 cm
D	96 dB (A)
E	95 dB (A)
F	81 dB (A)
G	5 m/s^2

www.electrolux.com

BELGIQUE/BELGIË
Electrolux Outdoor Products
Tel: 02 363 0311, Fax: 02 363 0391

CESKÁ REPUBLIKA
Electrolux, spol. s.r.o., oz Electrolux Outdoor Products,
Na Kr°ec°ku 365, Praha 10 - Horní Me°cholupy
Tel: 02/7487 0164, Info-linka: 0800/110 220
Internet: www.partner-flymo.cz E-mail: info@husqvarna.cz

DANMARK
Electrolux Outdoor Products, Flymo/Partner A/S,
Lundtoftegårdsvej 93A, DK 2800 Kgs.Lyngby
Tel: 45 877577, www.flymo-partner.dk

DEUTSCHLAND
Electrolux Outdoor Products
Tel: 097 21 7640, Fax:097 21 764202

ESTONIA
Electrolux Estonia Ltd (Electrolux Eesti AS)
Tel: (372) 6650010

FRANCE/SPAIN/PORTUGAL
Electrolux Outdoor Products
Tel 01 46 67 8141, Fax 01 43 34 2491

FINLAND SUOMI
Electrolux Outdoor Products Finland
Tel: + 358 9 39611, Fax: + 358 9 3961 2644

ITALIA
Electrolux Outdoor Products Italia Spa
Via Como 72 - 32868 VALMADRERA (LC)
Numero verde : 8 0 0 - 017829 Fax : 0341-5816701

IRELAND
Electrolux outdoor products
Tel: 01 4565222, Fax: 01 4568551

MAGYARORSZÁG
Electrolux Lehel Kft
Tel: 00 36 1 251 41 47

NORGE
Electrolux Outdoor Products
Tel: 69 10 47 90

NEDERLAND
Electrolux Outdoor Products BV
Tel: 0172-468322, Fax: 0172-468219

ÖSTERREICH
HUSQVARNA Zentralwerkstätte, Industriezeile 36,
4020 LINZ,
Tel: 0732 770101-60, Fax: 0732 795922

POLSKA
Electrolux Poland Sp. z.o.o. Husqvarna,
01-612 Warszawa Myslowicka 10/2
Tel:- (22) 8332949

SLOVENIJA
HUSQVARNA-Ges.m.b.H. Nfg. KG, Industriezeile 36,
4020 LINZ,
Tel: 0732 77 01 01-0, Fax: 0732 77 01 01.40
Internet: www.husqvarna.at E-mail: office@husqvarna.co.at

SLOVENSKA
Electrolux Slovakia s.r.o.,
Borova Sihot 211, 033 01 Lipt. Hradok
Tel: 044 522 14 19, Fax: 044 522 14 18,
www.flymo-partner.sk

SCHWEIZ/SUISSE/SUIZZERA
Flymo Schweiz/Suisse/Suizzera
Tel 062 889 93 50 / 889 94 25,
Fax 062 889 93 60 / 889 94 35

SVERIGE
Electrolux Outdoor Products, Sverige
Tel: 036 – 14 67 00, Fax: 036 – 14 60 70

UNITED KINGDOM
Electrolux Outdoor Products United Kingdom
Tel: 01325 300303, Fax: 01325 310339

Electrolux

ELECTROLUX OUTDOOR PRODUCTS ITALY S.P.A.

Headquarters: Via Como 72 - 32868 - VALMADRERA (LC) - ITALY- Tel. +39 0341 203111 - Fax +39 0341 581671
Web site: www.electrolux.com/mcculloch

Factory: Via Unione 2\4 - 20015 - PARABIAGO (MI) - ITALY - Tel. +39 0331 498011 - Fax +39 0331 558538

Our policy of continuous improvement means that the specification of products may be altered from time to time without prior notice.
Electrolux Outdoor Products manufacture products for a number of well know brands under various registered patents, designs and trademarks in several countries Electrolux Outdoor Products Italy

The Electrolux Group. The world's No.1 choice.

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

COD. 99991703 - 531213397 ED.11/2004 Q.TY 10000 PRINTED IN ITALY

GI STUDIO